


CALDON® ULTRASONICS

LEFM Link – 2G PC Interface Software

User Manual

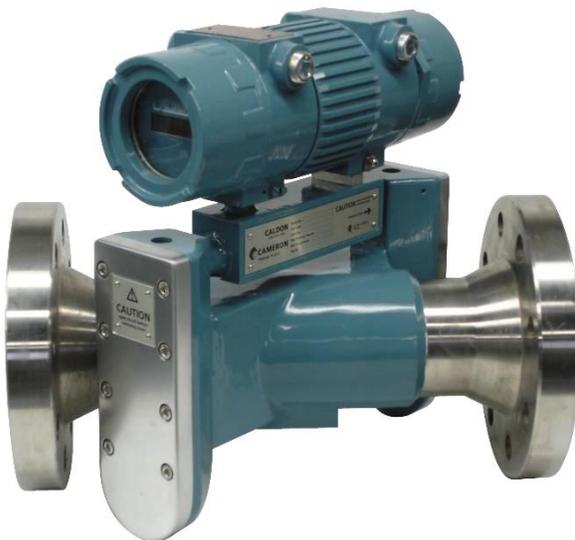

Caldon is a trademark of Cameron International Corporation (“Cameron”).
LEFM is a registered trademark of Cameron.
Modbus is a registered trademark of Modbus Organization, Inc.

Copyright © 2014 Cameron International Corporation (“Cameron”). All information contained in this publication is confidential and proprietary property of Cameron. Any reproduction or use of these instructions, drawings, or photographs without the express written permission of an officer of Cameron is forbidden.

All Rights Reserved.
Printed in the United States of America.

Manual No. IB0910, Rev. 04
October 2014

The Caldon LEFMLink 2G software is the second generation of diagnostic software intended as a user diagnostic tool for the LEFM2xxCi series flow meters (220Ci, 240Ci, and 280Ci as well as the 280Fi and 2010 flow meters) and the SoundTrack family of pipeline interface detectors (SoundTrack, SoundTrax and Void Detectors).

It is recommended that before performing system verification and repair procedures, personnel receive general training from Cameron. Contact Cameron for information on training programs.

Cameron is a manufacturer of high quality instrumentation and control products, selling direct from a Pittsburgh based factory to customers in the U.S. and through agents and representatives abroad. A complete range of support services are offered. For additional information or assistance on the application, operation or servicing the LEFM 2xx Series Meter or SoundTrack family, write or call, or visit www.c-a-m.com/flo.

Table Of Contents

Section 1	1
Introduction	1
System Requirements	1
Section 2	3
Installation and Hardware Setup	3
Software Installation	3
Hardware Configuration	6
Section 3	9
User Interface Overview	9
Software Architecture	9
Main Screen Overview	12
Section 4	16
Downloading and Uploading Configurations	16
Download Setup Files	16
Upload Setup File from Device	19
Section 5	22
User Manuals	22
Section 6	24
Task Operation	24
Data Logging	24
Update Scaling	27
Setting Transmitter Time	29
Resetting Transmitter Totalizers	30
Re-Initializing Velocity Profile	31
Path Triggering	32
Section 7	36
Menu Items	36
Signal Diagnostics	36
Calculation Diagnostics	38
Transducers	39
Echo Paths	40
Trending	41
Health Audit	42
Section 8	48
Section 9	49
Tools	48
Viewing Modbus Registers	48
Output Forcing	49
Zeroing Meter	50
Communications	51

Section 1

Introduction

The LEFMLink 2G is the second generation of software used as a PC diagnostic tool for the LEFM 2xxCi series flow meters and the SoundTrack family of pipeline interface detectors. This manual covers the use of the software to diagnose problems, update the input and output scaling, and configuration of these devices.

This manual assumes the user understands the troubleshooting techniques covered in the IOM manuals and/or has been trained by Cameron personnel on these techniques. This manual also assumes that the user is familiar with the use of Windows and PC computers.

System Requirements

PC (preferably a laptop) installed with Windows XP or later operating system with at least one free serial communications (COM) port.

Section 2

Installation and Hardware Setup

Software Installation

LEFMLink 2G is packaged as an installation program. The installation program, LEFMLink 2G Setup.exe, can be run directly from the 101A729 CD. Run the executable by double – clicking on the icon.



The following screen will open to start the installation process; click “Next >” to install LEFMLink 2G on the computer.

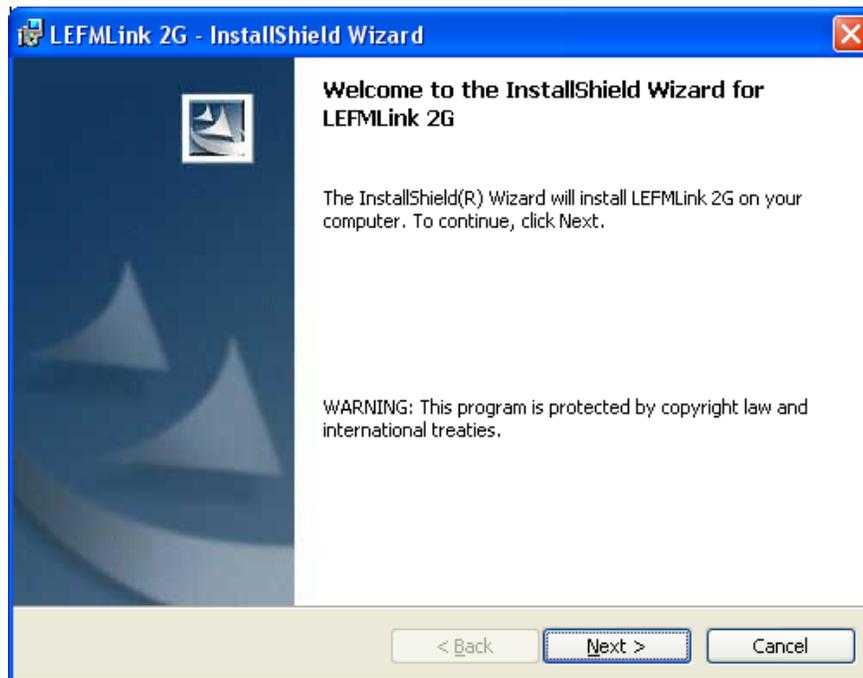


Figure 2-1: Install Program

Enter user information and click “Next >” to continue.

LEFMLink 2G - InstallShield Wizard

Customer Information
Please enter your information.

User Name:
Engineer

Organization:
Caldon

Install this application for:

- Anyone who uses this computer (all users)
- Only for me (Cameron International Corporation)

InstallShield

< Back Next > Cancel

Figure 2-2: Enter User Information

The default directory is C:\Program Files\Cameron\ModWorXPro, Click “Install” to install LEFMLink 2G to the specified location.

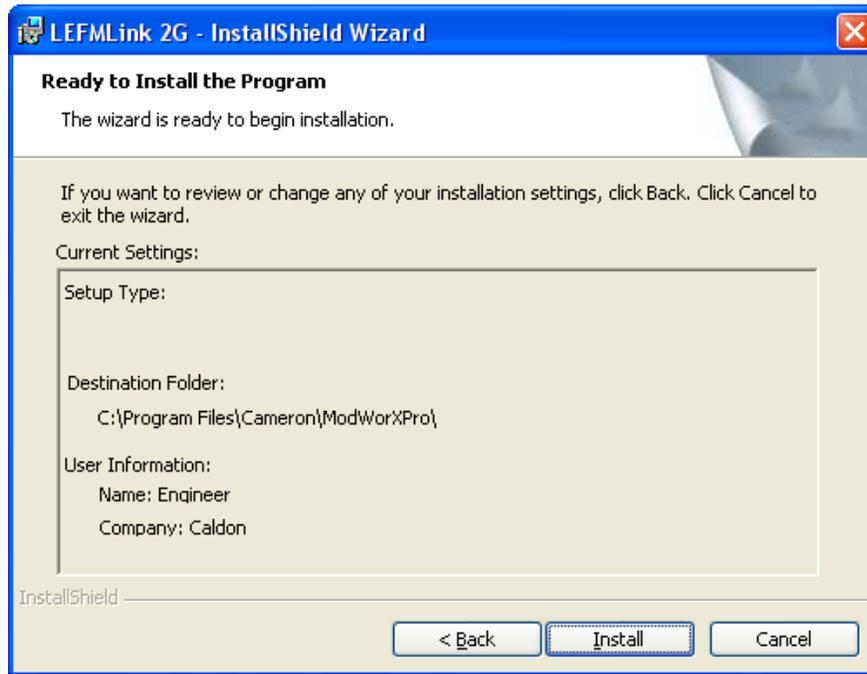


Figure 2-3: Ready to Install

Click on Finish to exit the installation program and launch LEFMLink 2G (see [Section 3](#)).

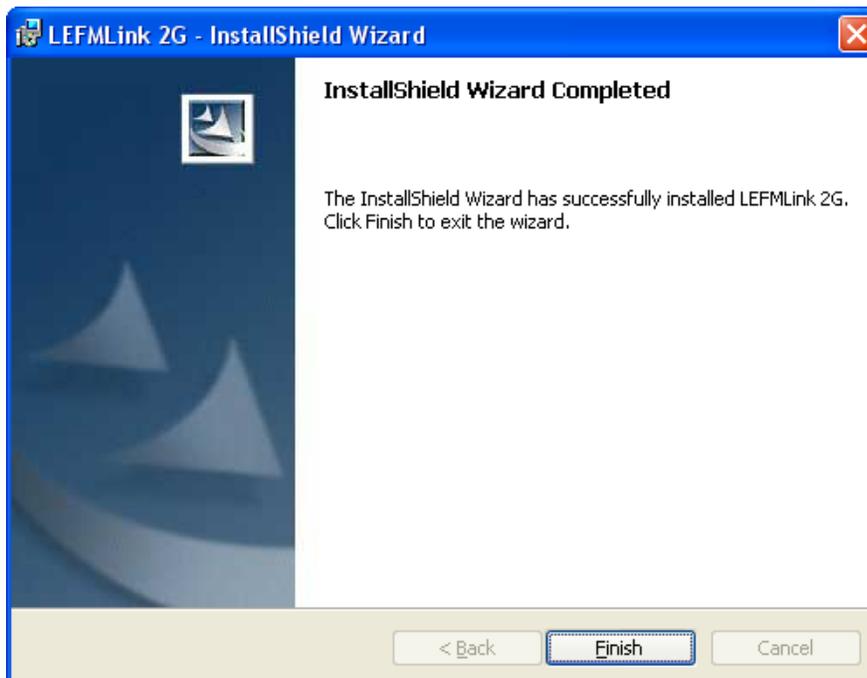


Figure 2-4: Installation Complete

Hardware Configuration

Connect the serial interface cable between an available COM port on the PC and terminal TB-2 pins 1 to 5 (or TB-2 pins 6 to 10) on the transmitter.

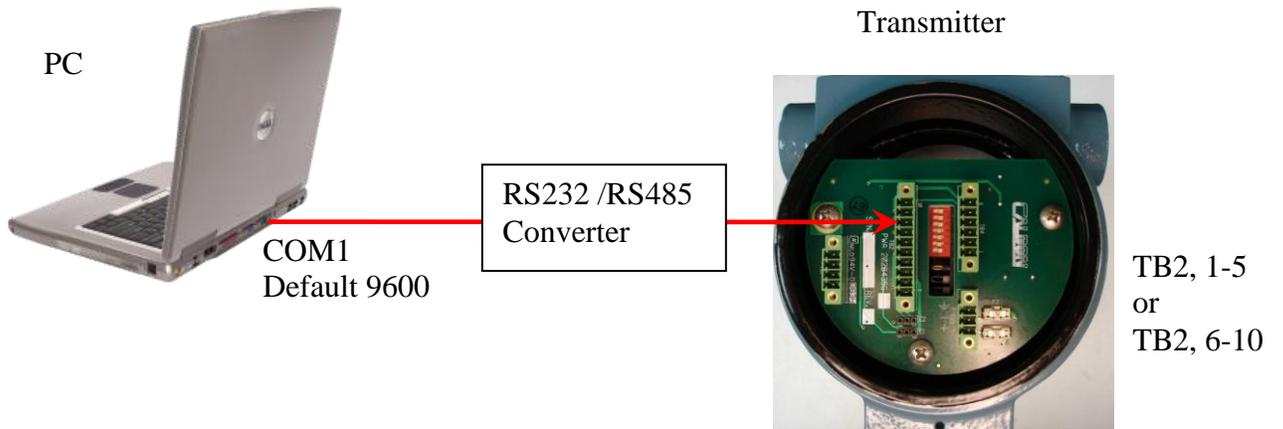


Figure 2-7 Hardware Connection to Hazardous Area Electronics

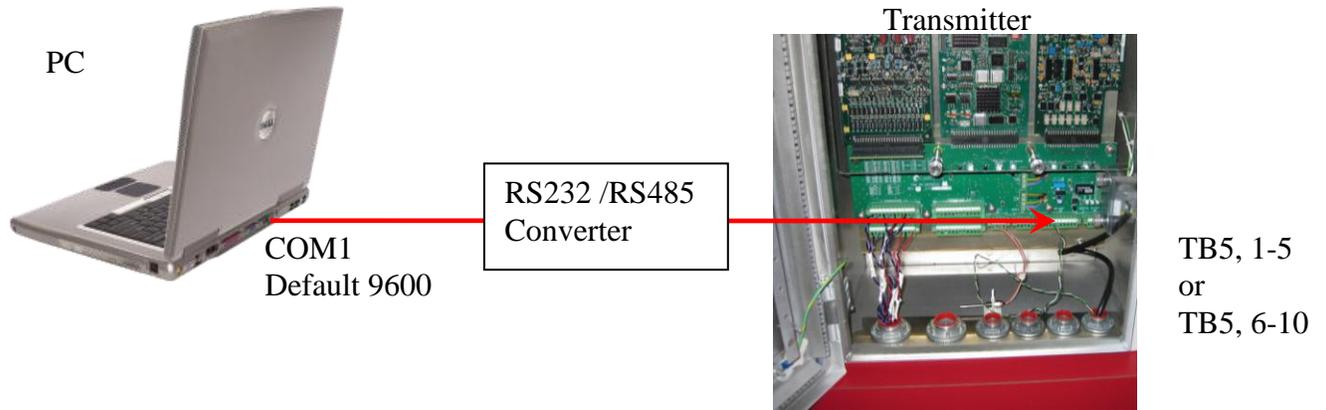


Figure 2-8: Hardware Connection to NEMA4X Electronics

Start LEFMLink 2G according to Section 3.

By default, LEFMLink 2G communicates on COM1 at 9600 baud to Modbus Slave Address 1¹. If this matches the configuration of the Cameron equipment then LEFMLink 2G will display data similar to that shown in Figure 2-9 and LEFMLink 2G is ready for further use. If the LEFMLink 2G screen shows a communication failure, like Figure 2-10, further steps are necessary to connect. One or more of the following are likely:

- The Cameron hardware device has different communications settings; see [Section 3](#) for instructions on changing the communication settings to match the device configuration.
- COM1 is in use by another program. This can happen for example when programs such as HotSync or ActiveSync for a PDA are enabled. Close down the conflicting program to establish connection, or select a different COM port if available.
- The cable is damaged.

¹ Note: The default value on a given PC will be equal to that last used by the software. The software remembers the communication settings used.

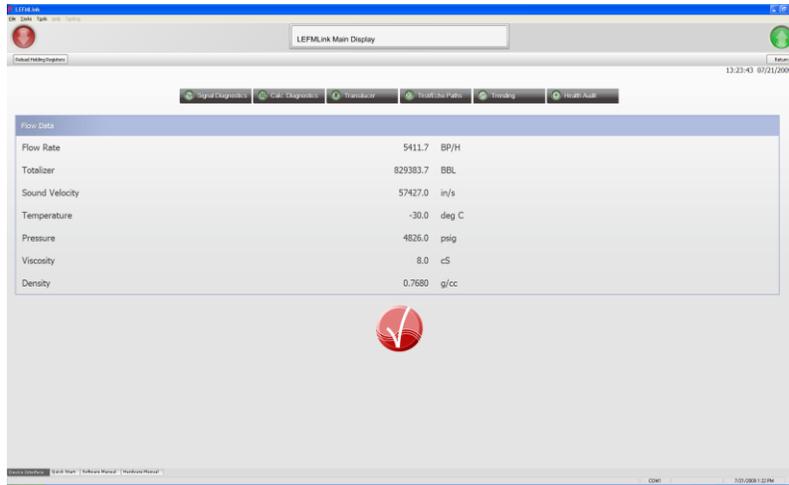


Figure 2-9: LEFMLink 2G Communicating with Transmitter

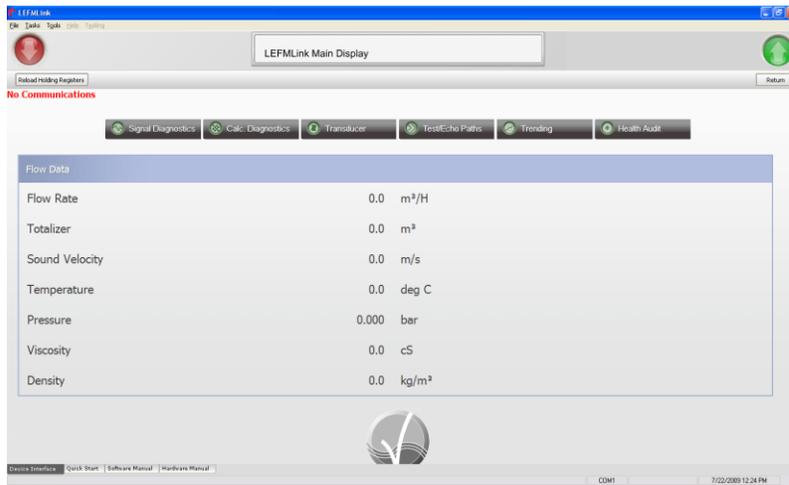


Figure 2-10: LEFMLink 2G with No Communication with Transmitter

Section 3

User Interface Overview

The user interface is similar for all Cameron measurement devices, with some product specific differences. Common features will be described first, followed by product specific features as applicable.

Software Architecture

Once entering through a brief “splash” screen (where LEFMLink 2G has an animated start), the software goes to a connect screen (Figure 3-1). The main screen (Figure 3-4) is the anchor to the architecture. From this screen user manuals can be launched (PDF files), tasks can be executed and data can be collected.

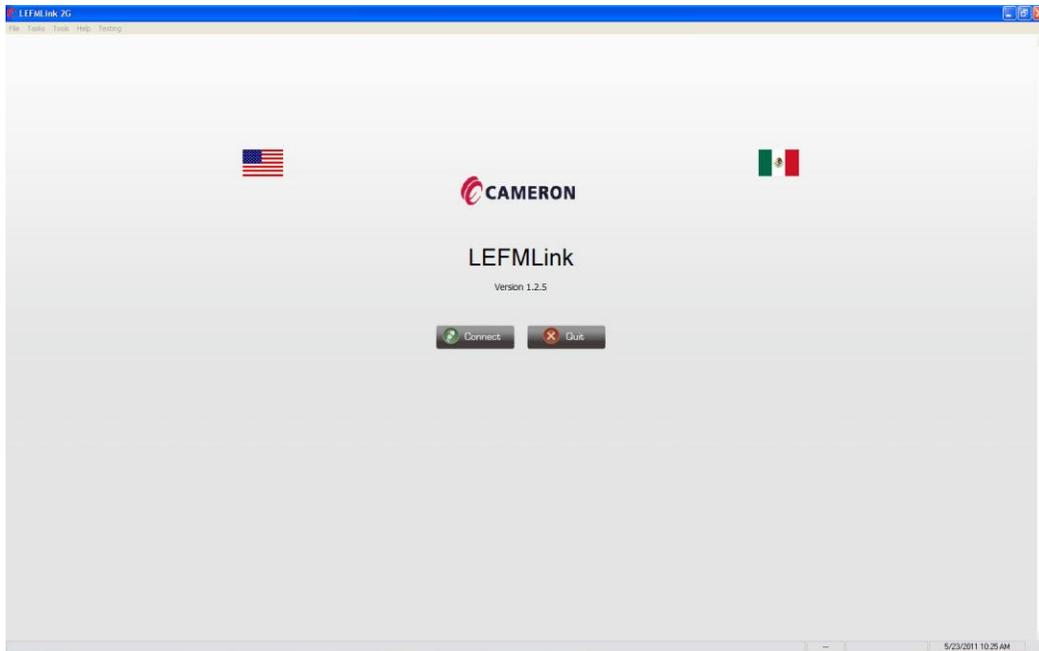


Figure 3-1: LEFMLink 2G Initial Connection Screen

From the connect screen, simply click on connect. The software will launch the communications screen to let the user select the appropriate communications (Figure 3-2 and 3-3).

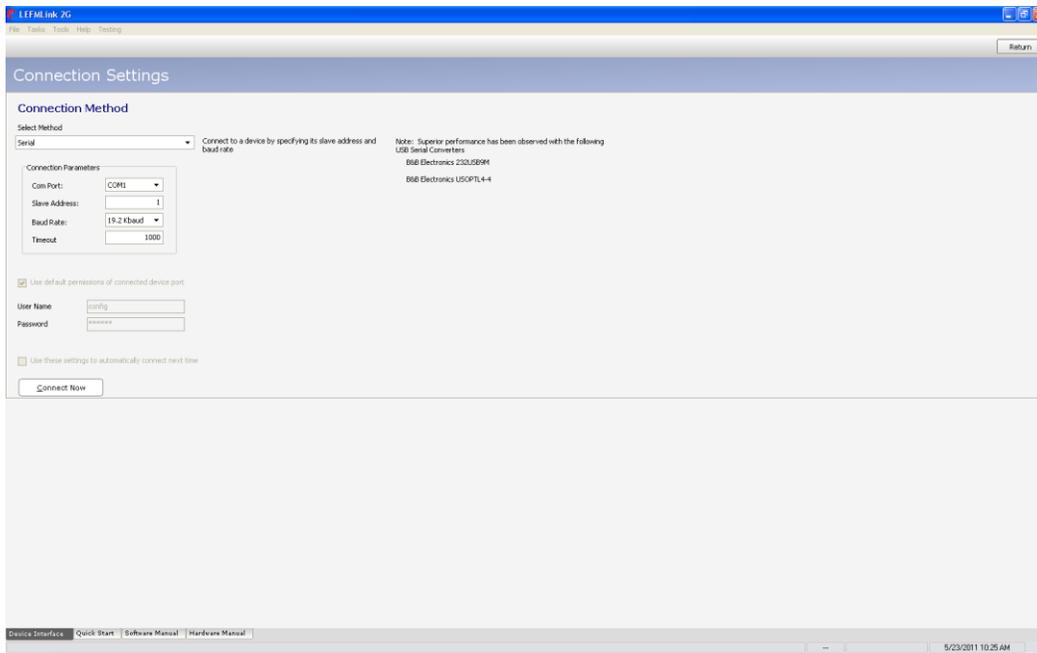


Figure 3-2: LEFMLink 2G Serial Communications Screen

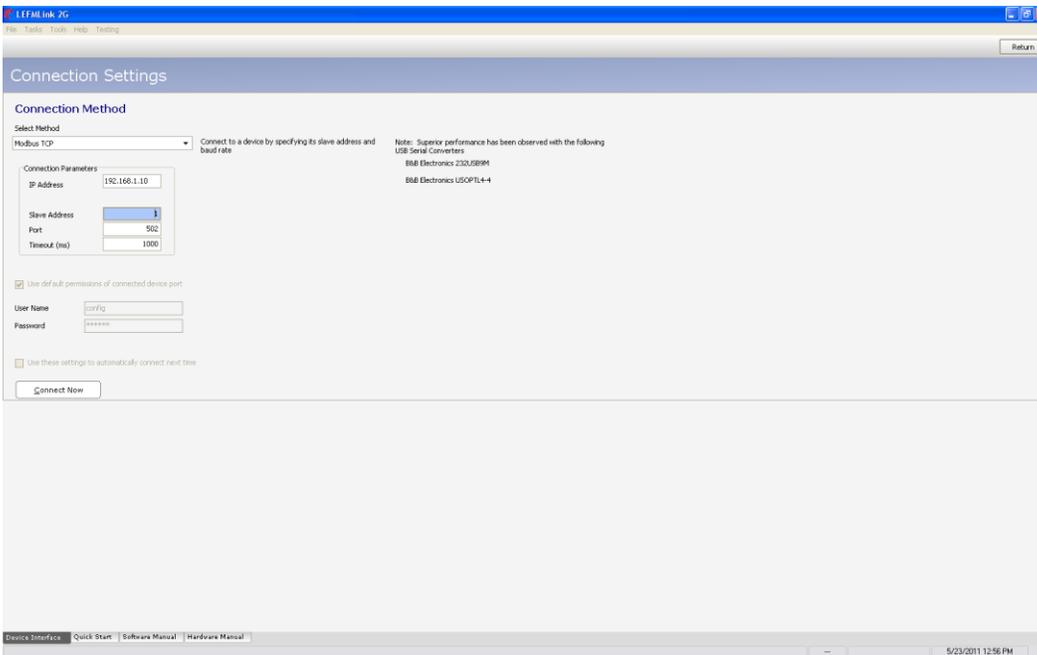


Figure 3-3: LEFMLink 2G Modbus TCP Communications Screen

On some small screens, i.e. Netbooks, the “Connect Now” button may not be visible, press Alt+c to activate.

The main screen of LEFMLink 2G contains an overview of the meter status and measurements. Figure 3-4 shows the main screen and highlights the major areas of that screen.

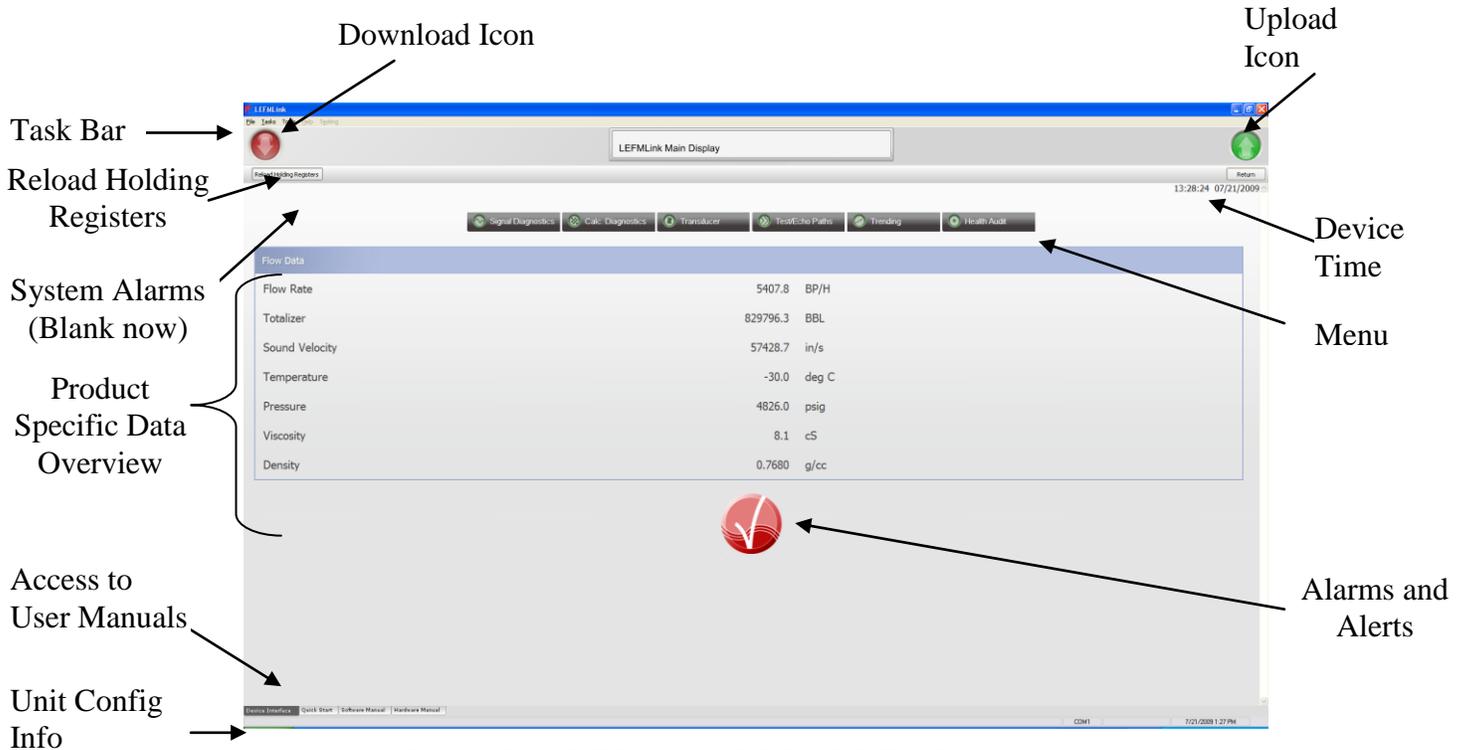


Figure 3-4: LEFMLink 2G for LEFM Series Meter

The following subsections give introductory explanations of the main screen operation.

Main Screen Overview

Task Bar

The task bar is used to access the other functions within LEFMLink 2G. The task bar is only accessible from the main screen. Below is a summary of the main task functions. Each task item will be detailed in a later section.

File Commands

- Exiting Program

Tasks (See [Section 6](#))

- Data Logging – Start and Stop data logging; choose directory path and name of log
- Analog Input/Output Scaling – Change Analog Input, Analog Output, and Pulse Output Scaling as well as the communication settings on the Transmitter.
- Analog Input RTD Scaling
- Set Transmitter Time
- Reset Transmitter Totalizers
- Re-Initialize Velocity Profile
- Path Triggering

Tools (See [Section 8](#))

- View Modbus Registers (tool to see and write to any Modbus register)
- Output forcing – Force values to analog and frequency output for loop calibration purposes.
- Zero Meter (Special site procedures required)
- Communications (Change Meter Baud Rate and Slave ID)

If a task item cannot be executed under the current conditions it is grayed out (for example device does not have an RTD, the task is “grayed out”. Task items are normally all active when on the main screen, but are grayed out if operating on one of the lower screens.

Reloading Holding Registers

LEFMLink 2G displays its units based on the transmitter’s units. However, the units are read only when LEFMLink 2G connects for the first time. If the user were to change the

units, then hitting this action button lets LEFMLink 2G re-read the registers and update its text appropriately².

Downloading and Uploading Icons

LEFMLink 2G has special icons for sending configuration files to a transmitter (downloading – icon is a red “down” arrow) and for reading configuration files from a transmitter (uploading – icon is a green “up” arrow). There is a user manual section on these tasks.

Device Time

The transmitter has its own real time clock. The time and date of this clock can be observed on the main screen. If necessary, this device time can be changed to the PC time.

Access to User Manuals (See [Section 5](#))

These tabs are used to access the user manuals associated with the product.

Menu (See [Section 7](#))

The menu is used to access the other screens and operations performed by LEFMLink 2G. Once within a menu screen, the task bar items become inaccessible until return to the main screen. Below is a summary of menu operations. Each task item will be detailed in a later section.

- Signal Diagnostics
- Calculation Diagnostics
- Transducers
- Test/Echo Paths
- Trending
- Health Audit

System Alarms

This section contains status information for the device. One of the following messages can be displayed:

No Setup
No GSS
BAD Checksum
No Communications

No Setup appears if the system has not been configured or the setup was cleared.

No GSS appears if the system is configured to use a GSS (Global Synchronization Signal) and none is present.

² LEFMLink does re-load the holding registers periodically, however, if the user knows that the units have changed, then reloading manually is recommended.

BAD Checksum appears if the system memory self diagnostics fail.


No Communications appears if the system is not transmitting with device

Lower Status Bar (Unit Configuration Info)

On the lower status bar information about the unit currently connected is shown. This may include:

The left side of the bar has configuration data from the transmitter.

- Unit Serial Number
- Unit Tag Number
- Flow Type (Gross Volume, Net Volume, Mass)
- Number of Paths
- Fluid Type

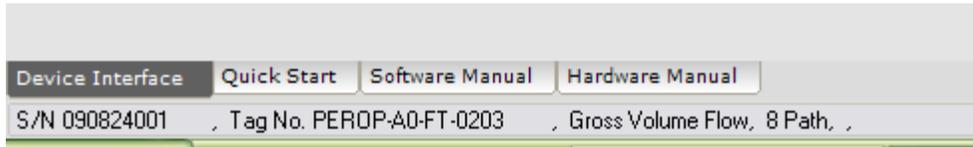

The right side has information about the connection settings.

- Communications Port
- Baud Rate
- Slave ID

Product Specific Data Overview

The main screen for the LEFM 2xx Series Flow Meters displays the following:

- Flow – Current Flow Rate in the programmed units of the transmitter
- Totalizer – Total Volume since last reset in flow units
- Sound Velocity – Fluid Sound Velocity
- Temperature – Meter Body Temperature input
- Pressure – Optional Fluid Pressure input (default zero if not installed)
- Viscosity – Calculated Fluid Viscosity
- Density – Calculated Fluid Density

Alarms and Alerts Log

This icon shows the system status. A color red indicates some out of specification condition. Clicking on this icon opens a status summary page.

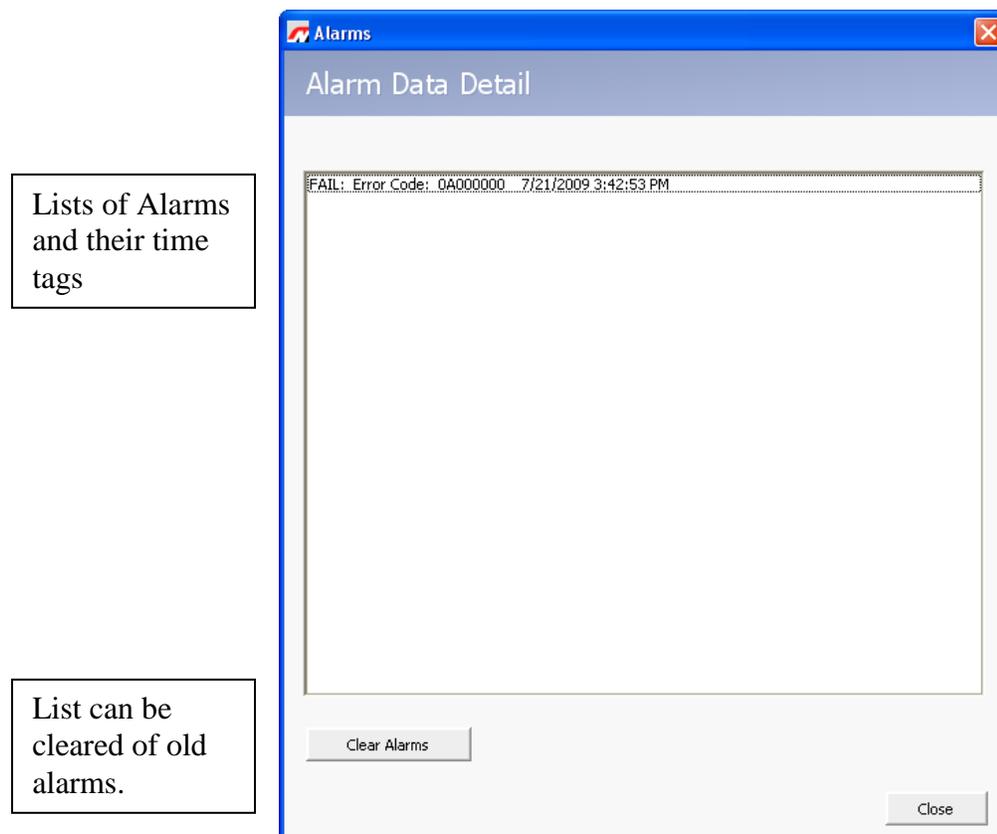


Figure 3-5: LEFMLink 2G Alarm Log

Section 4

Downloading and Uploading Configurations

Download Setup Files



The icon Download configuration file to device command sends a new setup to the transmitter. To download a setup file to the device, select the red down arrow on the main screen. This procedure may change settings that affect the flow measurement value.

Figure 4-1 shows the Setup Files dialog box.



Figure 4-1: Setup Files Dialog Box before Configuration File is Selected

Password Set

For any command that changes the configuration of the electronics, a Password Set command is required. Different commands and functions will be available to the user depending on the level of the password entered. A 4 digit numeric user password is required.

These passwords are defined in the configuration file and the Administration level password is required to change it from the default value.

The default values are:

Level 1 – Analog Scaling/Setting Time and Resetting Totalizers

<u>User Number</u>	<u>Password</u>
1	1111
2	2222
3	3333
4	4444
5	5555

Level 2 – All entries to devices

<u>User Number</u>	<u>Password</u>
Administrator	1234

Note: User passwords can be changed by sending a calibration file. Be aware of values in the calibration files.

Note: If the Electronics has not been configured and is showing **No Setup** then the master password of 16286 must be used for the initial download. After that the password sent from the cal file will be used.

Send Setup File



Sending the incorrect setup file will adversely affect the operation of the device. The setup file (*.cal) contains device specific parameters that have been defined at the factory. Consult Cameron before sending a new setup. If the device has a valid setup, perform an upload (See next section) before proceeding to change the current settings.

The “Select Setup File” opens a file-open dialog box (Figure 4-2). Select the appropriate *.cal file for the connected device. Click “Open” to send the selected setup file to the device.

After the setup is downloaded the meter will reset. The reset process takes about 30 seconds, during which the transmitter’s main screen will go blank for a short period of time.

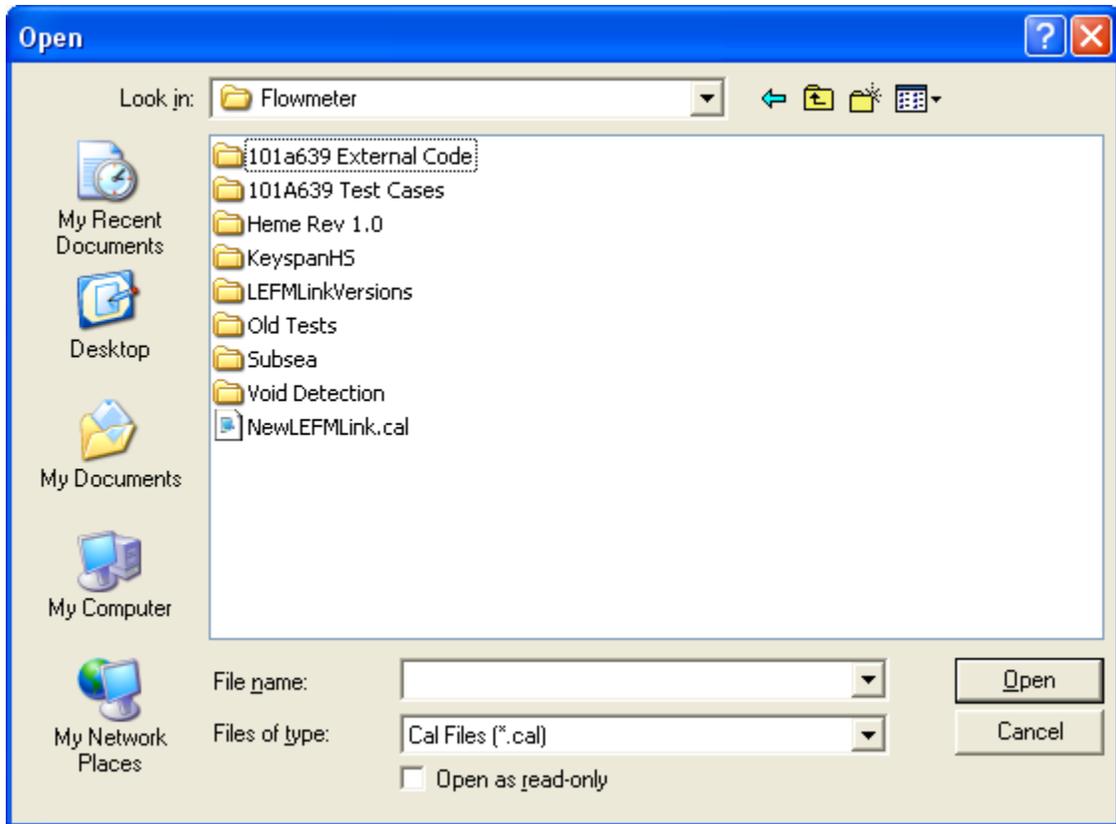


Figure 4-2: Send Setup File Dialog

Upload Setup File from Device



Figure 4-3 shows the Setup Files dialog box.



Figure 4-3: Setup Files Dialog Box before Upload Template is Selected

There is a two step process for uploading the current device configuration (*.cal) to the computer. The first step is to select a valid template. A template is a setup file (*.cal) containing a Modbus mapping of the configuration parameters (typically all) pertaining to the revision of the firmware controlling the transmitter.

Click on “Choose a Template File” and the Open Template dialog box appears (Figure 4-4). The setup file supplied with the device is the best template; however, default templates are also provided with LEFMLink 2G.

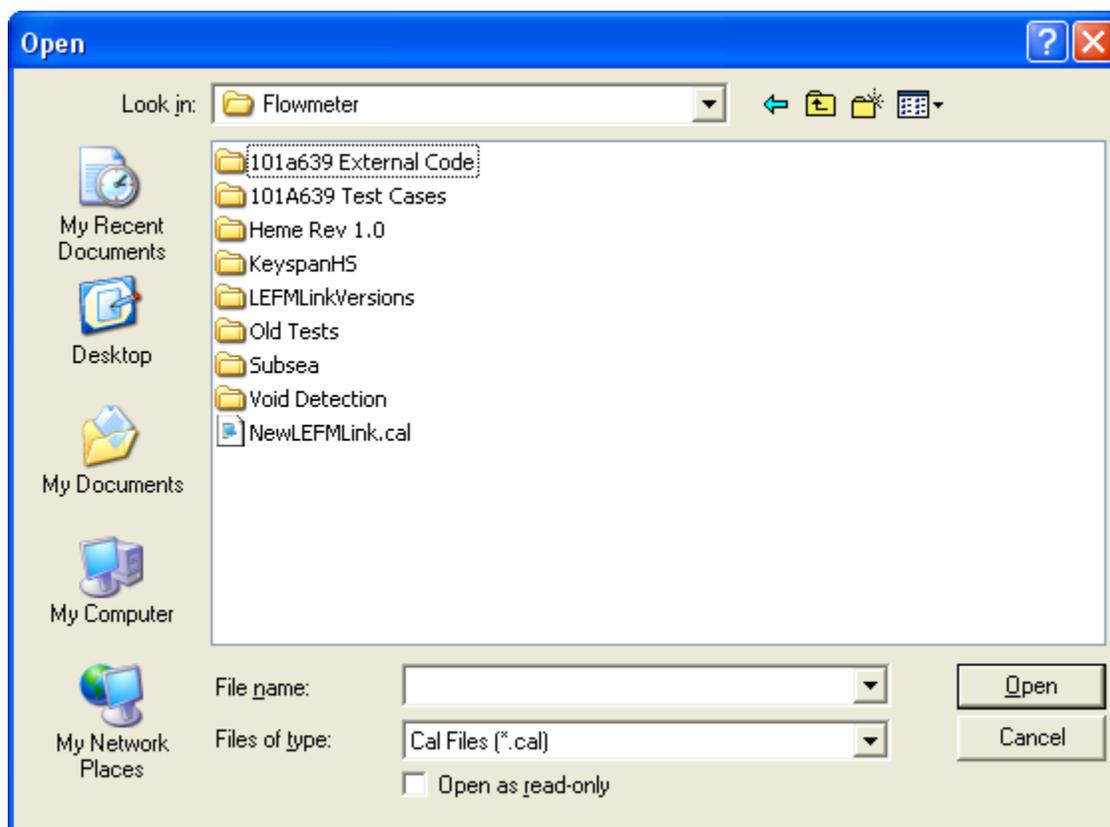


Figure 4-4: Select Upload Template Dialog

After a template is loaded, the “Select Output File” button becomes active³. Selecting the “Select Output File” button launches another Open dialog box (Figure 4-5). Enter/type a new name (Please do not use the same name as the file supplied by Cameron) and click “Open”.

Now click on the “Upload Now” button, which is no longer grayed out. This uploads the configuration parameters of the hardware device to the selected output filename in the format of the upload template.

The uploaded file can be re-sent as a setup file⁴.

³ This button replaces the “Choose Template File” button as seen in Figure 4-3.

⁴ Please confirm passwords, since passwords cannot be uploaded from the device.

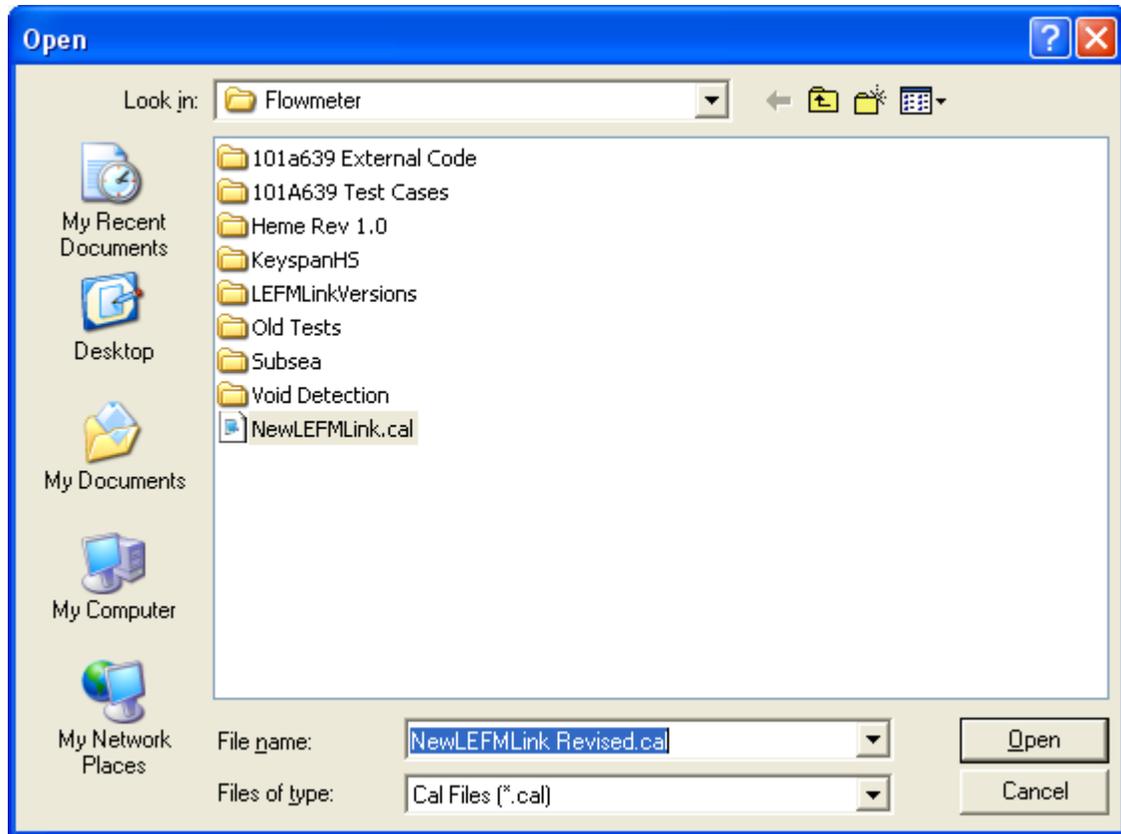


Figure 4-5: Upload Setup from Device File Selection/Naming Dialog Box

Section 5

User Manuals

LEFMLink 2G has the user manuals embedded in the product directories. To access these manuals, click on the labeled “tabs” on the bottom of the main screen.

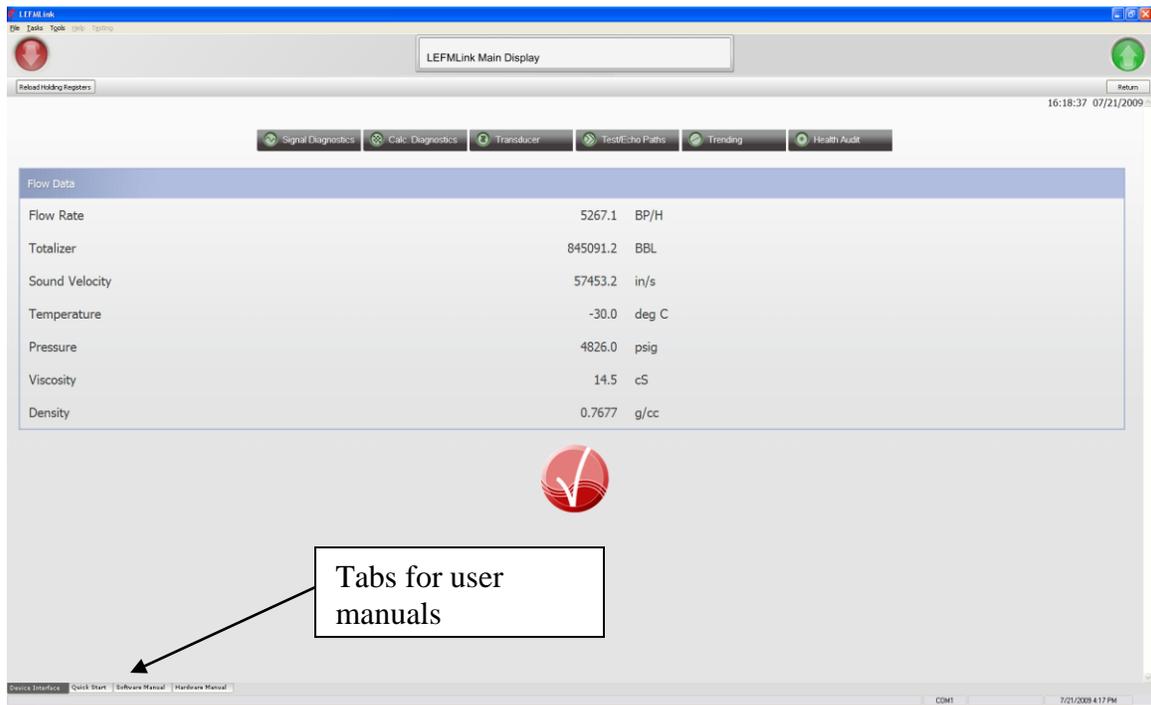


Figure 5-1: Main Screen

There are 3 types of manuals embedded.

- Quick Start – This LEFMLink 2G operation manual
- Hardware Manual – The model LEFM operation manual
- Software Manual – The Modbus manual for the LEFM product line



Figure 5-2: Example of User Manual Access

Section 6

Task Operation

The following sections explain the operation of the tasks found under the “Tasks” pull down menu. The tasks that can be performed are:

- Data Logging – Start and Stop data logging; choose directory path and name of log
- Analog Input/Output Scaling – Change Analog Input, Analog Output, and Pulse Output Scaling as well as the communication settings on the Transmitter.
- Analog Input RTD Scaling
- Set Transmitter Time
- Reset Transmitter Totalizers
- Re-Initialize Velocity Profile
- Path Triggering

Data Logging

Note: do not access data logging from this location to collect a log for a gas meter. See section 8.

The logging feature of LEFMLink 2G has two basic options, real time and event based logging.

The first option is to make a single continuous file, logging at the Log Frequency interval. This file will be closed daily and a new file started.

To access this feature select Tasks -> Data Logging.

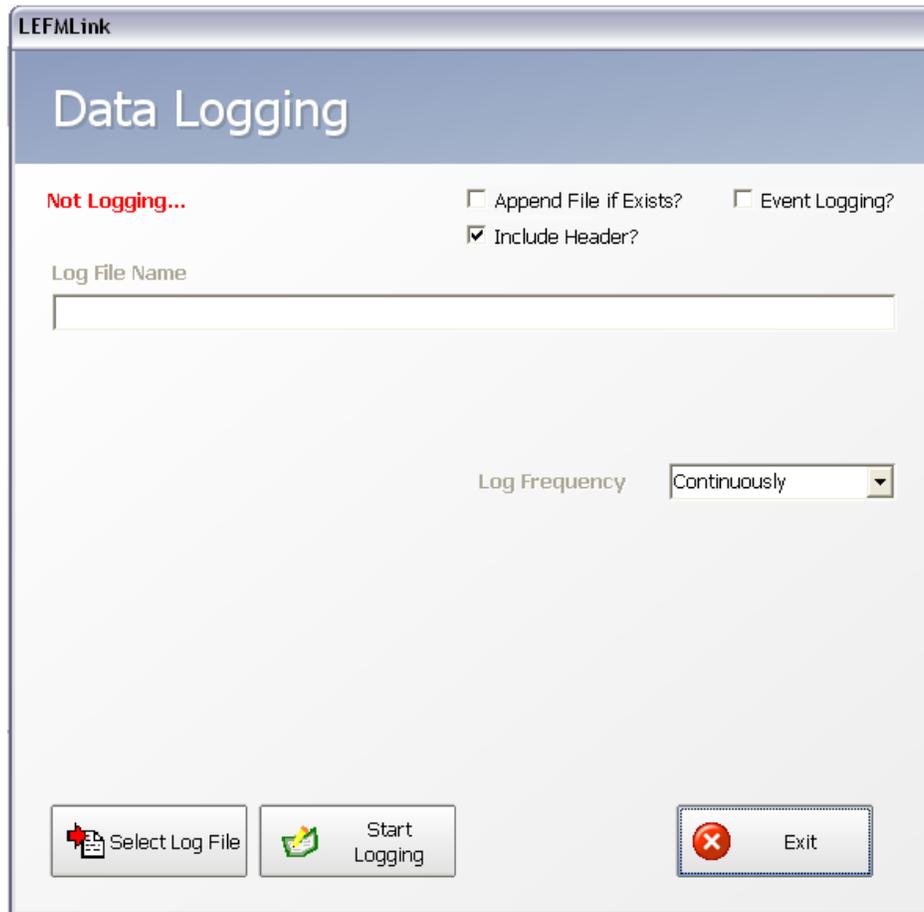


Figure 6-1: Logging Dialog Box

The Data Logging dialog box will be displayed.

Ensure the “Event Logging?” check box is not checked.

If adding data to an existing file check the “Append File if Exists?” check box.

If descriptive headers are required then check the “Include Header?” check box.

Click on the “Select Log File” button and select the file name and location for the log file. A default file name based on the date and time will be suggested but can be changed if desired.

Click on Start Logging to begin data logging. At this point you can exit the data logging dialog box and continue to view data in LEFMLink. Data Logging will show in the header in Red while logging is under way.

To stop datalog click on Tasks -> Stop Logging in the menu or if the datalog dialog is still active click on the Stop Logging button in the dialog box.

The second option, “Event Logging”, generates a log file at a transmitter specified number of occurrences, such as after 100 events have occurred. An event is defined as any change in the alarm/alert state of the meter. So for example, if a path were to go into alert and then subsequently clear the alarm, the transmitter records two events (going into alert and exiting alert). Each logged event is a complete data set of the meter. These logged events are used to help troubleshooting the meter when conditions are intermittent.

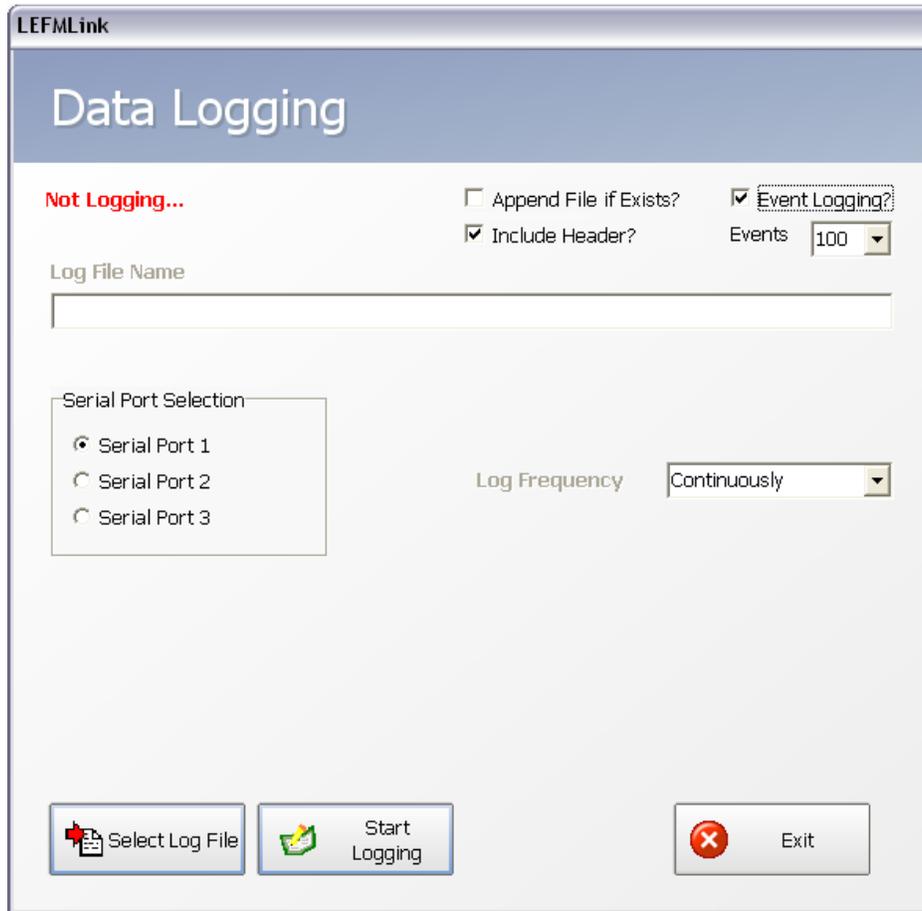


Figure 6-2: Event Logging Dialog Box

Setup for Event logging is similar to standard datalogs with two important exceptions.

First check the “Event Logging?” check box and select the number of events. By default leave it at 100 events, if fewer events are stored in the meter then real time data will be saved for those records.

Second, select the serial port on the meter LEFMLink is connected to.



Event Logging causes the Flow Meter to report the historic events on the serial port selected. Incorrect serial port selection can cause the historical events to be transmitted to a plant or flow computer instead of LEFMLink causing erroneous readings on those systems!

Update Scaling

The update scaling menu is used to change the Input and Output Scaling of the device. A valid password must be entered in order to change scaling.

Analog Input Scaling



Scaling the analog inputs will change the flow measurement calculation of the device. Contact appropriate site personnel prior to any analog input adjustments.

“Analog Input Scaling” is used to configure the analog inputs into the transmitter. Signal conditioning circuits are used to convert the incoming current signal to 0 – 5 Volts. The values for both Volts and Engineering Units are shown on this screen.

Below that are the current scaling values mapped to the 0 – 5 Volt input range. New scaling minimum and maximum engineering values may be entered into the New Min and Max edit boxes. After the new values are entered click “Accept”. When you are finished changing values click “Done”.

	Current Value	New Value
Minimum Voltage	1.00232	1.00232
Minimum Eng Scaling	0	0
Maximum Voltage	4.95	4.95
Maximum Eng Scaling	100	100
Current Value (Volts)	-1.14195	
Eng Value	-54.3173	-54.3173

Figure 6-3: Analog Input Scaling Dialog

Scale Analog RTD Inputs



Scaling the analog inputs will change the flow measurement calculation of the device. Contact appropriate site personnel prior to any analog input adjustments.

“Scale Analog RTD Input” is used to configure the analog RTD input into the transmitter. Signal conditioning circuits are used to convert the incoming current resistance signal to 0 – 5 Volts. The display shows the RTD values in volts, ohms and temperature.

To simplify scaling, an offset and a slope have been given to the user. It is preferred that these values be adjusted. After the new values are entered click “Accept”. When you are finished changing values click “Done”.

	Current Value	New Value
Minimum Voltage	0.103	0.103
Maximum Voltage	4.963	4.963
Temperature Offset	0	0
Temperature Slope	1	1
Vin Raw	0.00427	0.00427
Vin Scaled	-0.101572	-0.10157
Ohms	53.9943	53.9943
Temperature	-115.73	-115.73
Final Temp	-115.73	-115.73

Figure 6-4: Analog Input Scaling Dialog

Scale Analog Outputs



Scaling the analog outputs will change the flow measurement indication as observed by some plant devices. Contact appropriate site personnel prior to any analog output adjustments.

“Scale Analog Outputs” is used to configure the analog outputs from the transmitter. Signal conditioning circuits are used to convert the outgoing signal from 0 – 5 Volts to 0 to 20 mA. The transmitter has been factory programmed to operate with the signal conditioner modules specific to your device.

The Analog Output Scaling window displays the current value of the selected output in Engineering Units and percent full scale. The window displays the value scaled to engineering values. The units displayed on the Analog Output Scaling screen are consistent with those on the main screen. New values may be entered into the edit boxes. After the new values are entered click “Accept”. When you are finished changing values click “Done”.

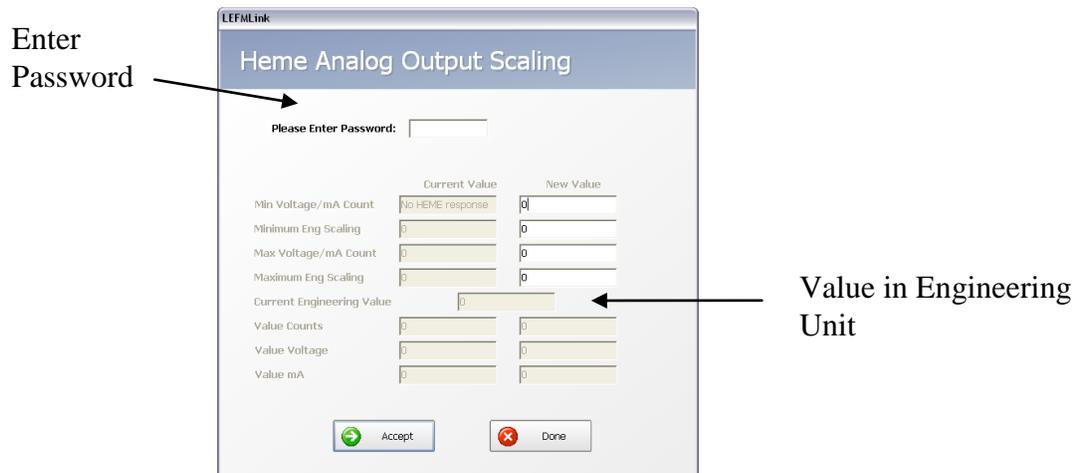


Figure 6-5: Analog Output Scaling Dialog

Setting Transmitter Time

The transmitter has a battery backed up clock with non-volatile memory that tracks time. However, when the device is at the factory, it is set to factory local time. Therefore, the delivered meter will need its time updated (if required by the site) and occasionally updated for clock drift. The screen that is launched to update the time is shown below.

LEFMLink

Set Time

Please Enter Password: *

Time Sent

Current Device Time 15:03:38 06/26/2009 Friday

Execute

Exit Without Sending

Figure 6-6: Setting Transmitter Time

This task is password protected but any level user can change the time. The program sends the PC time, so confirm that the PC time is appropriate.

Resetting Transmitter Totalizers

The transmitter has non-volatile memory that preserves the totalizer values during times of lost power. However, if the totalizers need to be reset (set to “0”), this task launches the following screen.

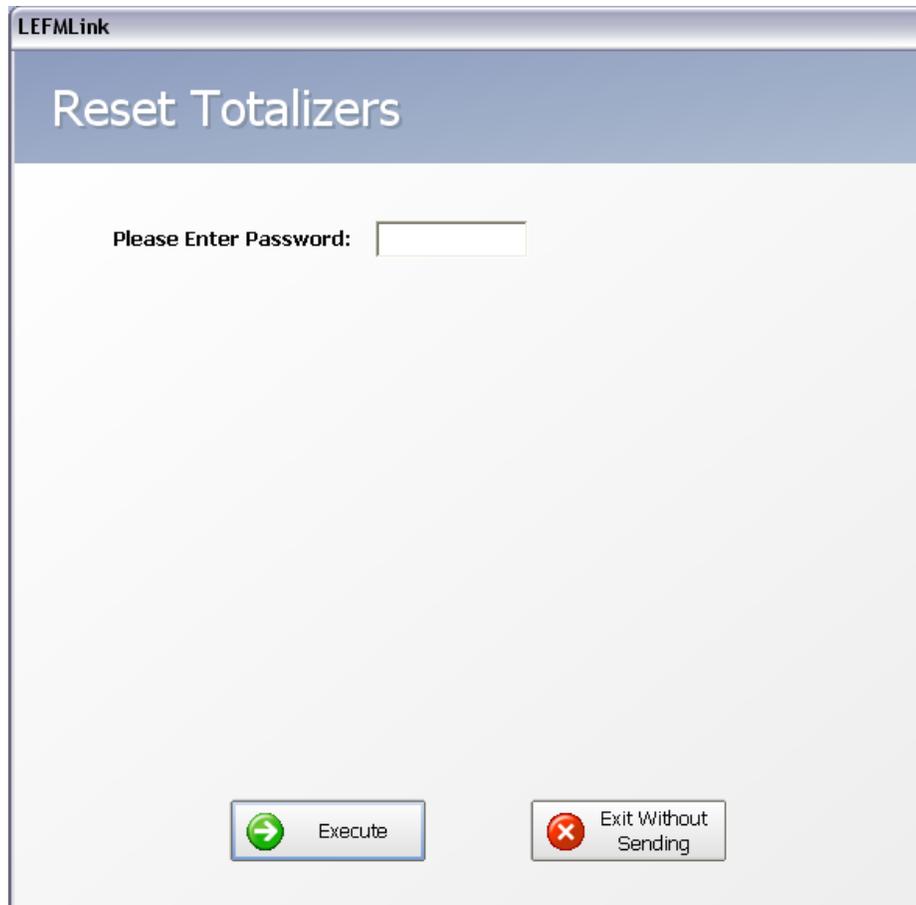


Figure 6-7: Resetting Totalizers

This task is password protected but any level user can reset the totalizers.

Re-Initializing Velocity Profile

The transmitter has non-volatile memory that preserves the best estimate of the velocity profiles during times of lost power. However, if these estimates need to be re-initialized (set to default values in the software configuration files), this task launches the following screen.

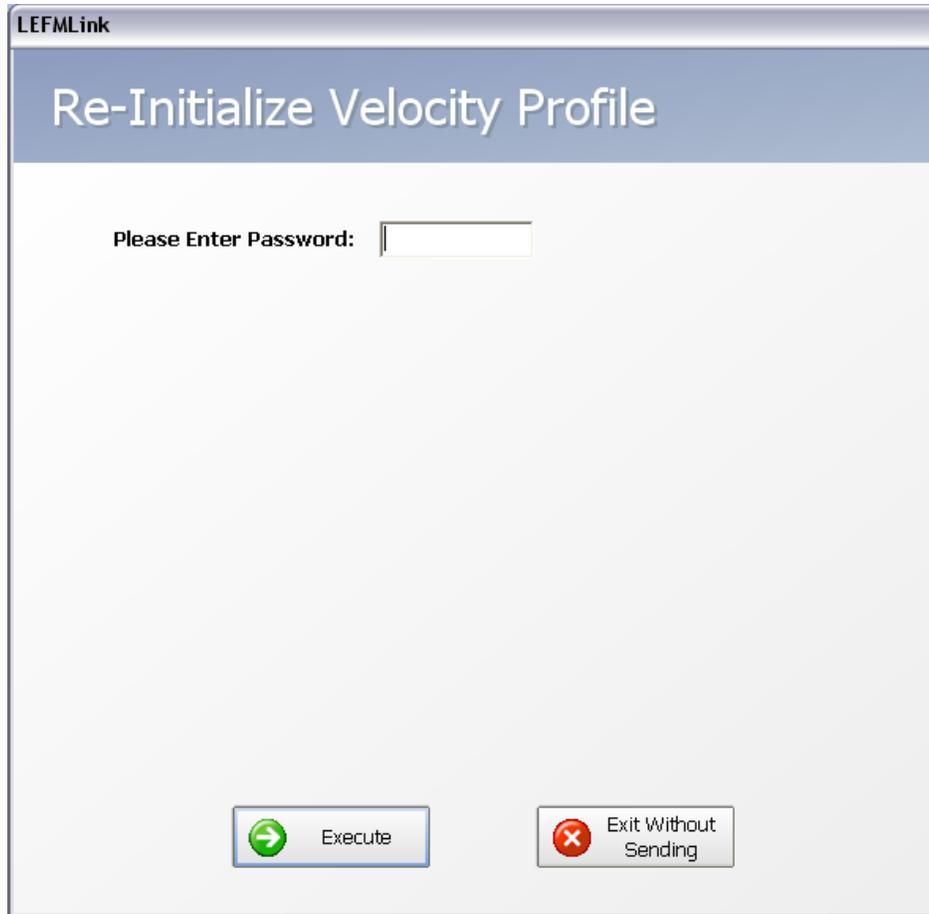


Figure 6-8: Re-Initializing Velocity Profile Values

This task is password protected but any level user can re-initialize the velocity profile.

Path Triggering

The path triggering dialog has two functions. First, it allows the user to select the path that is used for the test points on the back of the CTC board. This saves the user from having to change dip switch settings which can be difficult when the scope probes are in place.

Secondly, on later versions of the firmware this screen allows the user to get an indication of the waveform being used by the meter for all paths.

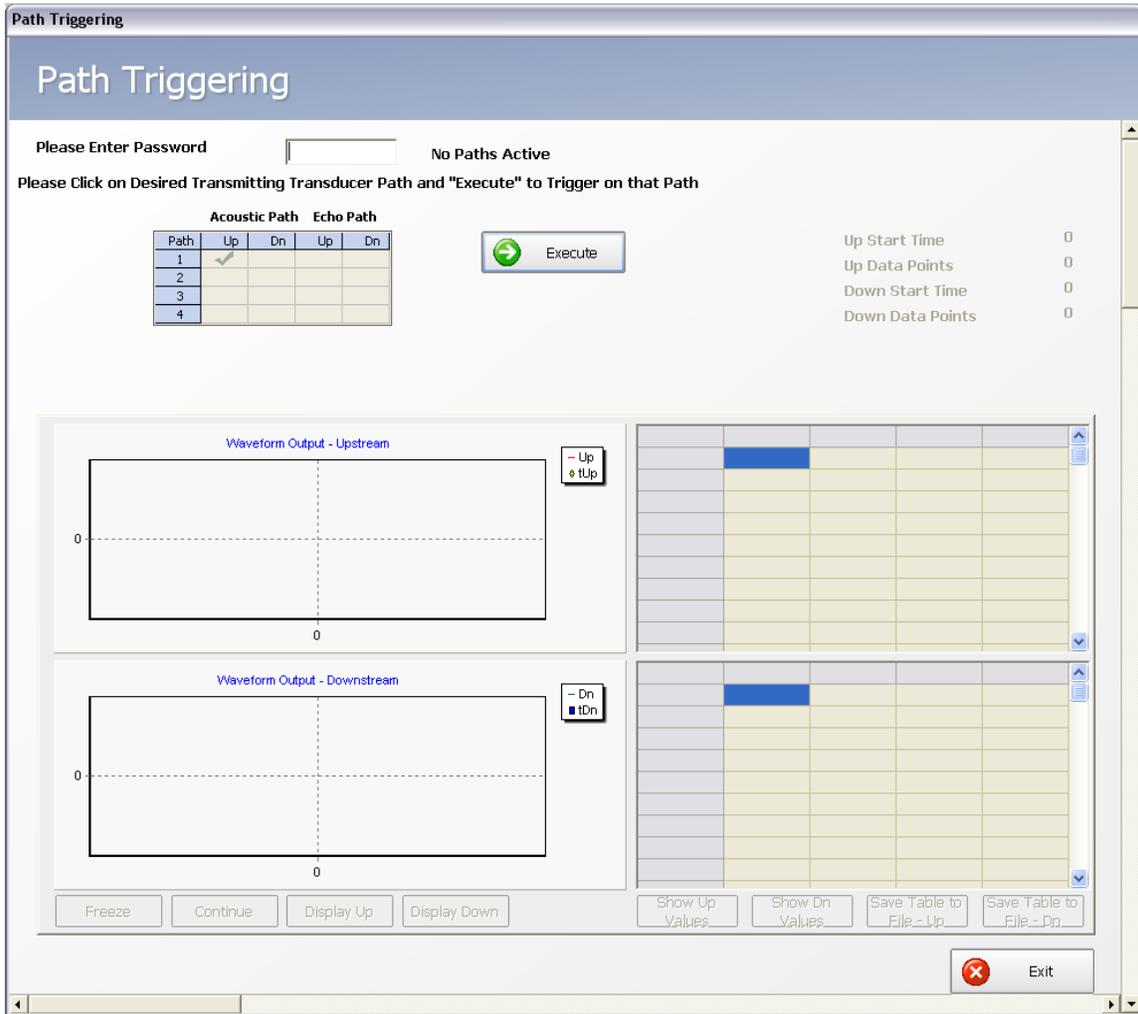


Figure 6-9: Path Triggering Dialog on Startup

First enter the administrator level password (1234 by default).

Click on the desired path in the matrix. If a scope is to be used select between acoustic Path Up and Down and Echo Path Up and Down. For an on screen waveform only the acoustic paths are displayed and up and down can be displayed simultaneously.

Click Execute to send the selected path to the meter.



Figure 6-10: Path Triggering Buttons Enabled

At this point the controls for the waveform display are enabled. Click “Display Up” and “Display Down” to show the waveforms on the screen. Click “Show Up Values” and “Show Do Values” to show tabulated data on the screen. To save a table click on the respective “Save Table to File” button.

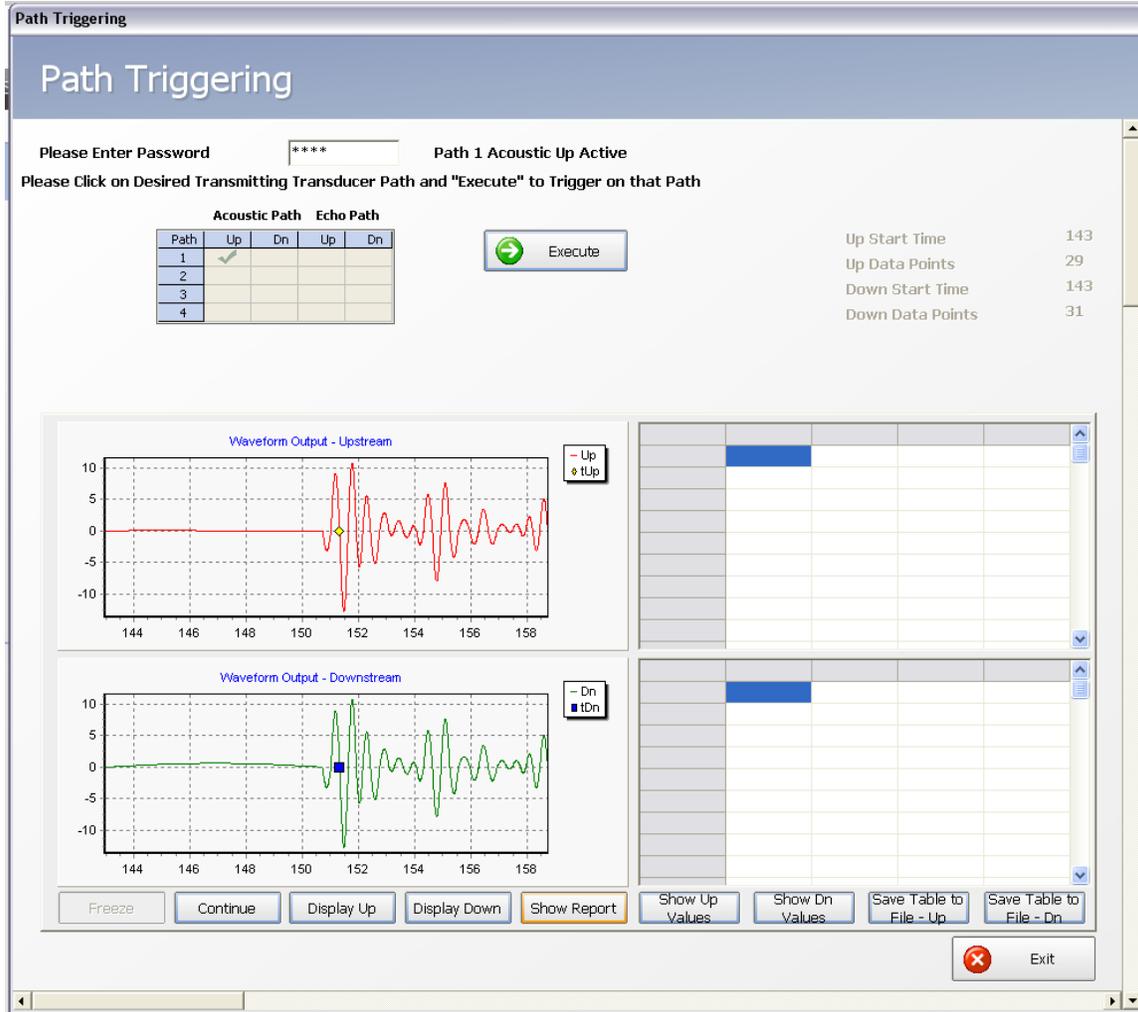


Figure 6-11: Path Triggering Waveform Displayed

Once the desired waveform is displayed on the screen you can stop updating by click on the “Freeze” button. The “Show Report” button becomes enabled and by clicking on it you get a report of the current waveform. This can be printed or saved to disk.

Click “Continue” to gather more data.

To change the selected path click on the desired path and Click “Execute” again.

To exit the screen click “Freeze” and then click “Exit”. On screens with limited resolution it may be necessary to scroll down to see the exit button.

S/N: 110503001 Tag No.: Computer Time: 2011/05/20 08:29:09
Setup Time: 5/20/2011 8:25:00 AM, Revision: 101A639 Rev 08.02.01, Checksum: B233, Setup ID: 8
Meter Type: Gross Volume Flow, 4 Path, Chordal, Oil
Acoustic Path 1 Up


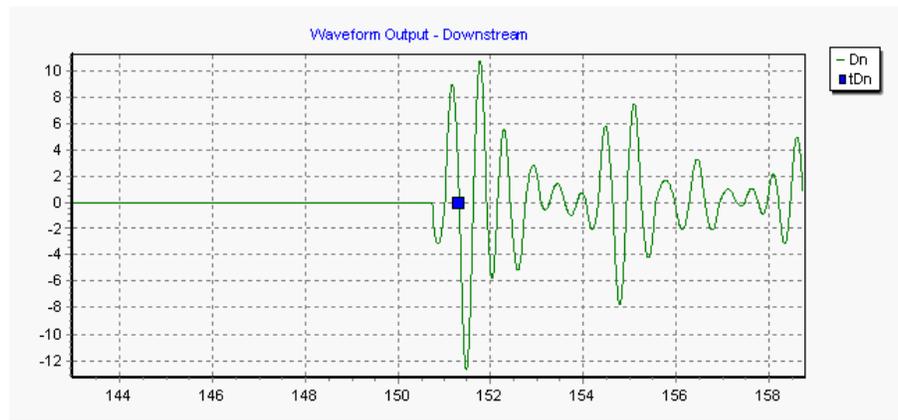


Figure 6-12: Waveform Report

Section 7

Menu Items

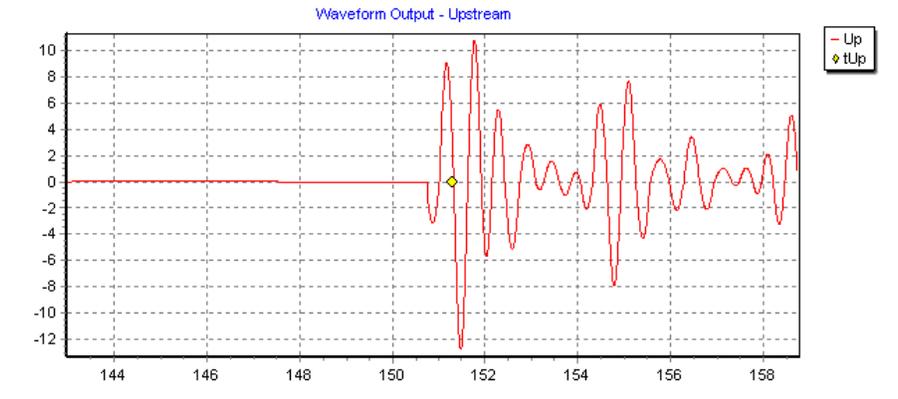

Each of the menu buttons will launch a screen as described below.

Signal Diagnostics

Header Info

LEFMLink 2G
Simulation

Signal Diagnostics | Calc. Diagnostics | Transducer | Test/Echo Paths | Trending | Health Audit

Signal Diagnostics

Header Info: Firmware Version: 01A639 Rev 07.03.01 | Ck-Sum: 061E | Last Mod By: 1111 | Updates: 6
Date: 5/6/2010 12:52:00 PM | Setup ID: 0 | Mids: 31 | Samples/Info: 100

Path Info

	Path 1	Path 2	Path 3	Path 4	Path 5	Path 6	Path 7	Path 8
TDown	351609.0	519046.0	519002.0	351087.0	351918.0	519160.0	519181.0	351927.0
DeltaT	209.0	251.7	279.1	206.1	218.5	295.3	256.4	185.3
Status	Normal							
Gain Up/On	29.6	29.7	33.6	33.6	34.6	34.6	35.5	35.6
SNR	99	99	99	99	99	99	99	99
Std Dev	9.8	16.4	10.8	13.5	9.7	8.2	16.0	11.2
Reject	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00

Data Quality Information (Occasional Events)

	Path 1	Path 2	Path 3	Path 4	Path 5	Path 6	Path 7	Path 8
No Signal	█	█	█	█	█	█	█	█
Low SNR Up	█	█	█	█	█	█	█	█
Low SNR Down	█	█	█	█	█	█	█	█
Waveform Failure	█	█	█	█	█	█	█	█
DeltaT Not Valid	█	█	█	█	█	█	█	█
DeltaT Deviations	█	█	█	█	█	█	█	█
Tip Deviations	█	█	█	█	█	█	█	█
TDown Deviations	█	█	█	█	█	█	█	█

State Vector Quality

	Path 1	Path 2	Path 3	Path 4	Path 5	Path 6	Path 7	Path 8
Temp Vibe in HR Alarm	█							
I2C Comm Failure	█							
Engineering Test Path Failure	█							
A/D Failure	█							
Path Failure					█			
Oscillator Test Fail					█			
Hydraulic Alarm					█			
CPV05 - Test Failure					█			

Meter State

Source Interface | Quick Start | Software Manual | Hardware Manual

7/15/2011 2:57 PM

Figure 7-1: LEFM 200 Series Signal Diagnostic Screen

Figure 7-1 shows the Signal Diagnostic Screen. The data on this screen is grouped into paths. The transmitter supports up to 8 paths. Each path represents an acoustic measurement in the meter. The LEFM240C contains 4 paths and the LEFM220C contains 2 paths.

Header Info

The following is a description of the items on that screen:

- Updates – Total number of data requests made by LEFMLink 2G that have been acknowledged by the transmitter. This value typically increments by one (1) every five (5) seconds.
- Samples/Info – The number of acoustic measurement scans during the last update period.
- Setup ID – Configuration ID of the device
- FW – Firmware Version (revision level).
- Checksum of the transmitter's configuration
- Time/Date of the transmitter's real time clock
- Last Mod By – Index of the user (1 through 5 and 6 is the administrator)
- Mods – Number of revisions to the configuration (since software was installed)

Path Info

- TDown – Acoustic transit time (nanoseconds) for each path.
- DeltaT – Difference between upstream and downstream transit time (nanoseconds) for each path.
- Status – Path Status; Normal, Reject, VOS (Sound Velocity Error) for each path.
- Gain Up & Dn – Pulse Catch Gain in dB, normally between 40 and 88 dB.
- SNR – Signal to Noise Ratio; ratio of acoustic signal amplitude to baseline noise.
- Standard Deviation– Measure of signal stability; calculates the normalized variance of delta T (expressed in % - max is limited to 100%, particularly for zero flow, when the standard deviation is greater than the measurement).
- Reject – Percent Data Rejected, normally less than 5%.

Data Quality Info (For information only)

- No Signal – Acoustic signal not received
- Tup Deviations – Transit time in the upstream direction disagreed with statistical average by more than acceptable limit.
- Tdown Deviations – Transit time in the downstream direction disagreed with statistical average by more than acceptable limit.
- DeltaT Deviations – Differences in transit time (between upstream/downstream) disagreed with statistical average by more than acceptable limit.
- Waveform Failure– Received waveform failed the cross correlation test.
- SNR Up/Dn – Waveform did not exceed noise by sufficient margin
- DeltaT invalid – Measurements did not agree with device ranges.

Calculation Diagnostics

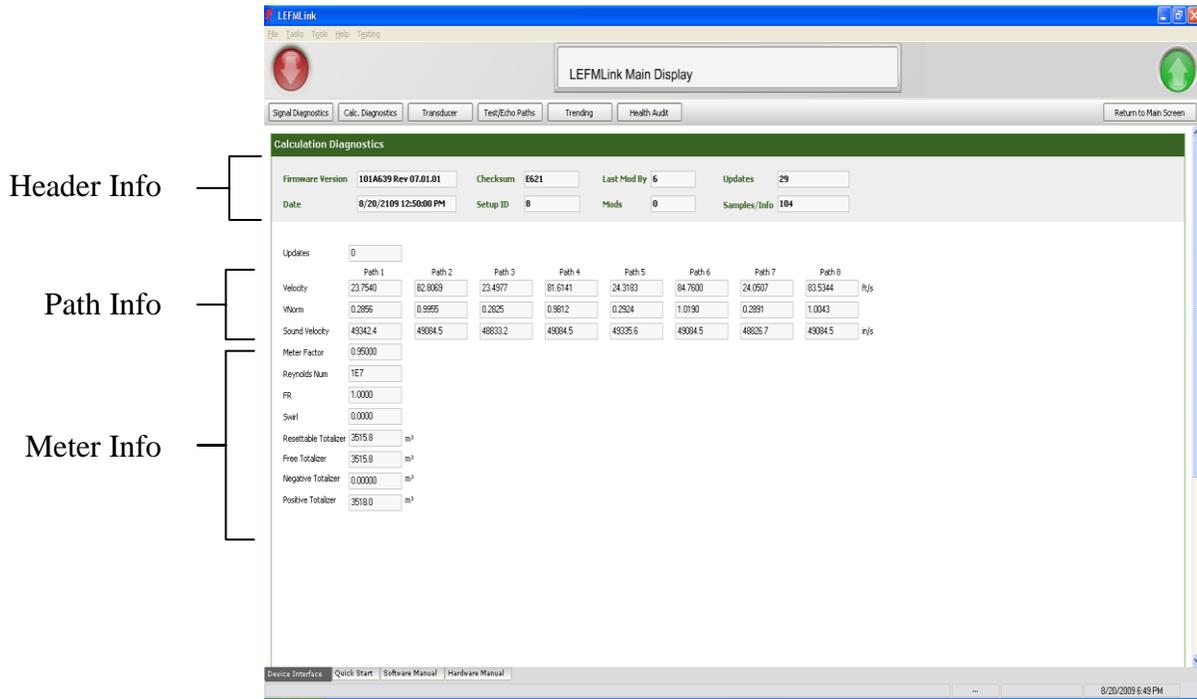


Figure 7-2: Calculation Diagnostics

The calculation diagnostics page shows velocity profile, profile factor, Reynolds Number, totalizer information, and setup information. Descriptions of the different fields follow:

Note: The header information is not repeated in this section.

Path Information

- Velocity – Axial fluid velocity calculated by each path.
- VNorm – normalized velocity of each path to the meter average.
- Sound Velocity – The speed of sound calculated per path.

Meter Information

- Totalizer values
 - Resettable,
 - Non-resettable (Free),
 - Positive only,
 - Negative only
- Meter Factor – Velocity profile correction factor used by the meter.
- Reynolds Number – Calculated Reynolds Number.
- FR – Flatness Ratio (ratio of outside path velocity to inside path velocity – 240 and 280 products only)
- Swirl – Swirl ratio normalized to axial velocity

Transducers



Header Info

Impedance Info

Oscillator Info

Figure 7-3: Transducers Screen

The transducer diagnostics page shows the impedance check of the transducers/cables and electronic oscillator test results. Descriptions of the different fields follow:

Impedance Information (Paths listed Up /Down)

- Positive to Shield – Normal ~ 200 Kohms
- Negative to Shield – Normal ~ 200 Kohms

Oscillator Comparisons

- Values from the 5 MHz and 100 MHz oscillators are displayed. If they vary by more than 0.01%, then an alarm is set within the transmitter and output to LEFMLink 2G.

Echo Paths

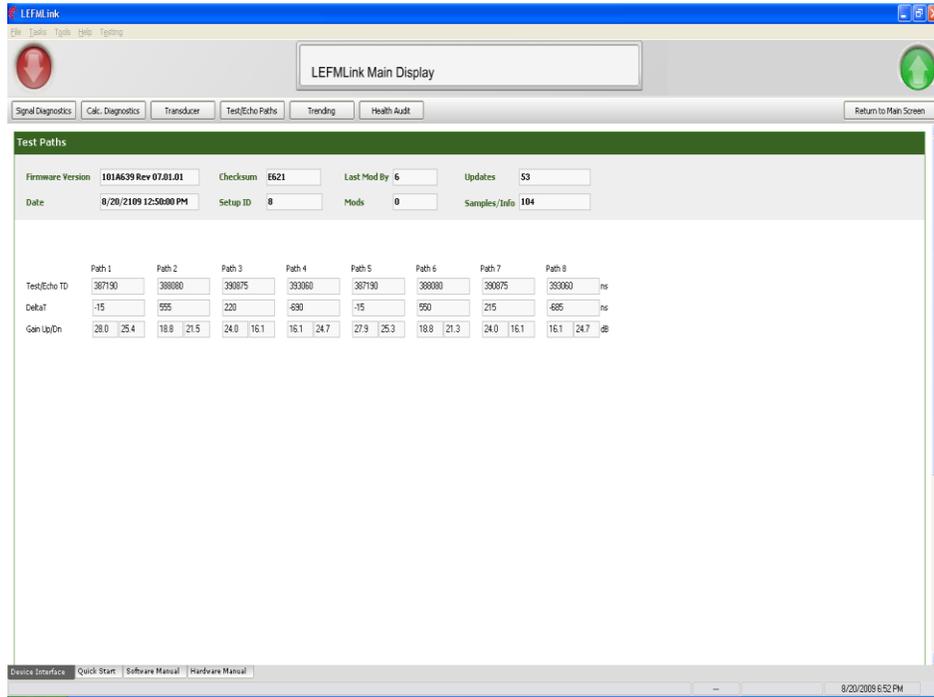


Figure 7-4: Echo Paths Screen

Each transducer is tested in an echo mode. This information is used to diagnose transducer performance and acoustic attenuation. Descriptions of the different fields follow:

Note: The header information is not repeated in this section.

Echo Path Information

- EPTD – Pulse Echo T Down, the time for the ultrasonic pulse to return to the sending transducer.
- EPDT – Pulse Echo Delta T, the difference in time between the two echo pulses.
- EP Gain Up & Dn – Pulse Echo Gains in dB, between 40 and 88 dB.

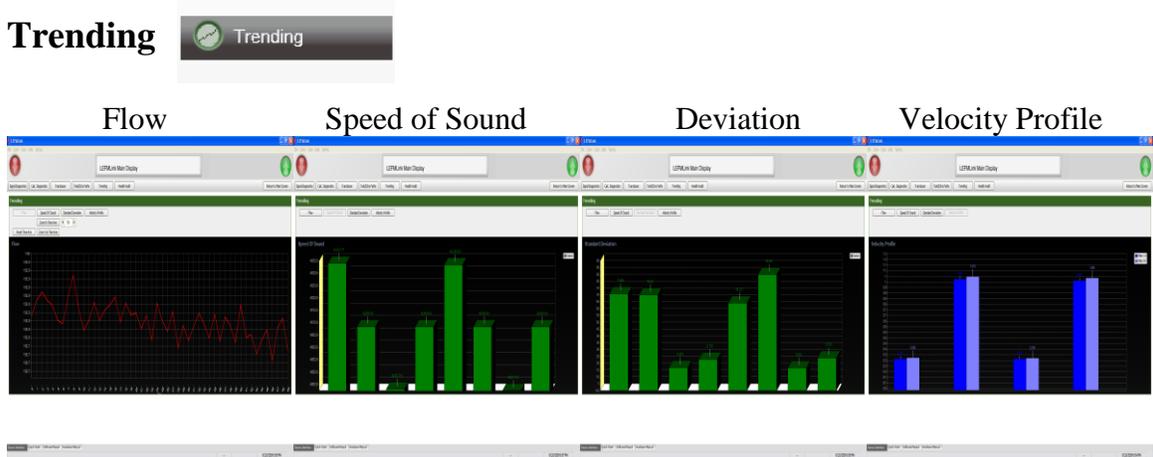


Figure 7-5: Trending Graphs

The per path flow, speed of sound, Delta T Deviation, and velocity profile graphs are shown in Figure 7-5. These graphs can be used to diagnose problems with the fluid hydraulics in the line.

Health Audit



The health audit is a one page summary screen. It plots the health of the meter by displaying the Gains, SNRs, velocity profile, statistics and hydraulic parameters in a graphical format.

In each graph, paths that are out of specification (either against a limit or against comparison to a reference point) are plotted in red. Further, comparison data (for example from the calibration of the meter or another date) can be plotted alongside the live data. To do a comparison, upload the appropriate “*.csv” file using the file manager tool, accessed via the “Open Compare File” button on this page. If a comparison file is not selected, only live data will be shown. The “Preview Report” button allows the user to save that data and to print the report.

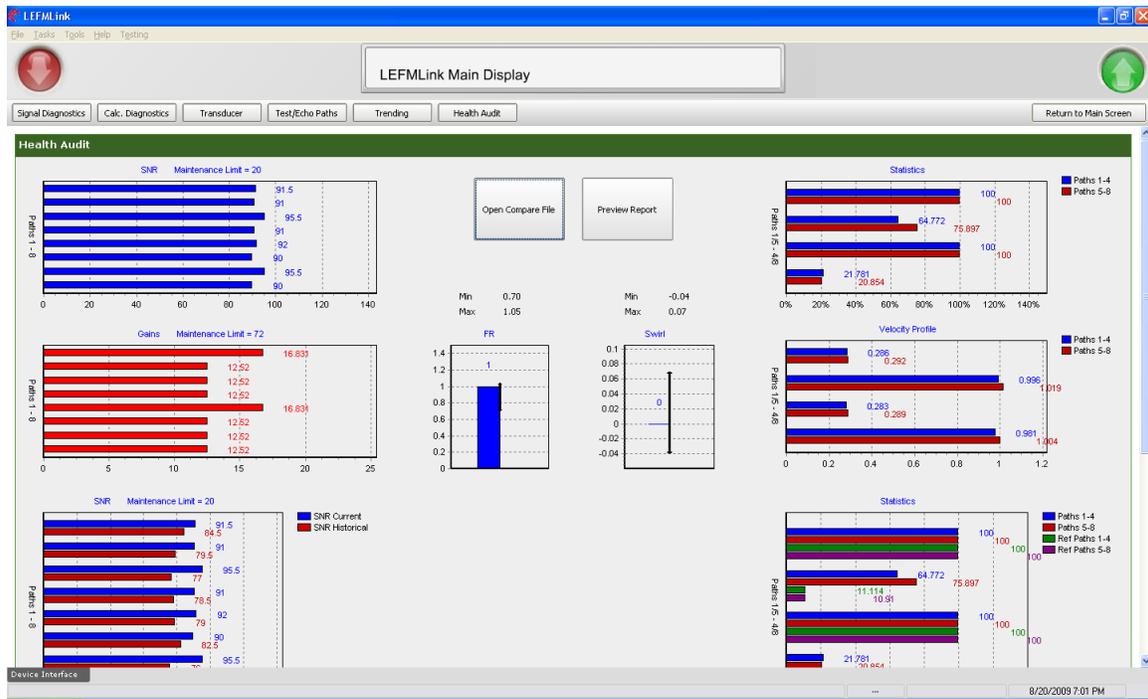


Figure 7-6: Health Audit Summary
 (Note: Scrolling on the Screen is Necessary)

Section 8

Gas Tab

This section describes the detailed diagnostic/acoustic data specific to the LEFM 380Ci ultrasonic gas flowmeter. The following pages describe the data accessible using the LEFMLink 2G software, and contained within the gas tab. Once you have connected to the meter using LEFMLink 2G (sections 2 and 3 describe the software setup and connection process) the Front Page should look identical to the below picture. If the “Gas Tab” is not visible on the front page follow the steps in the next section , “Setting up the Gas Tab”.

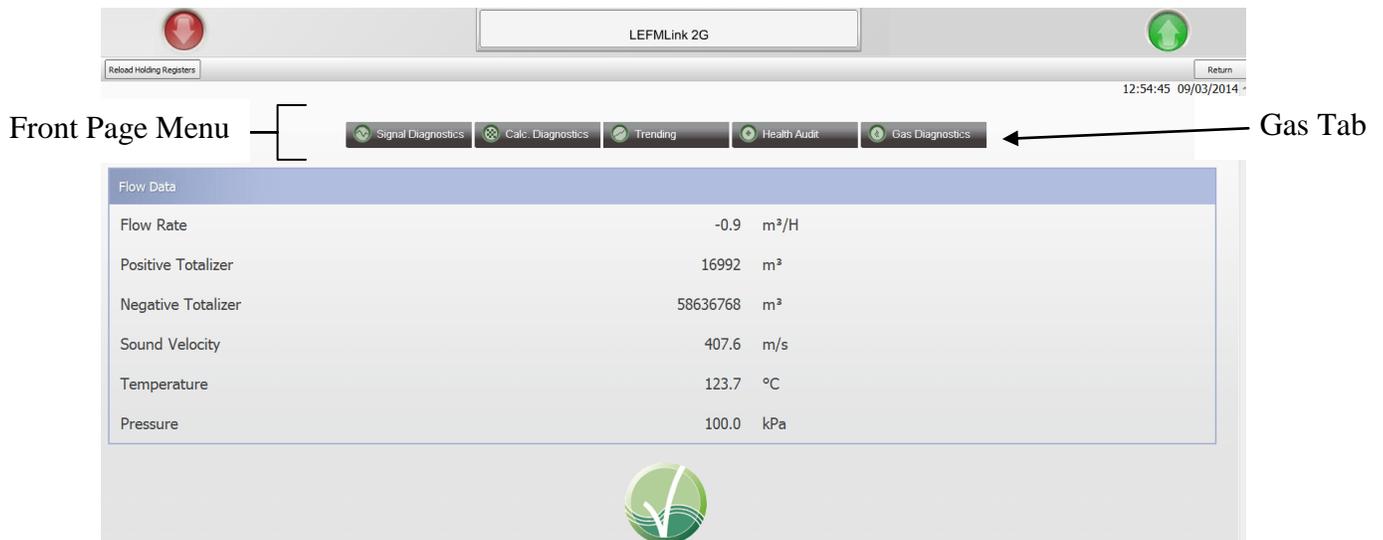


Figure 8-1 Main LEFMLink 2G screen with Gas Tab enabled

Setting up the Gas Tab

In order to activate the “Gas Tab” the user must navigate to the ModWorXPro.ini file and update / verify that the correct html file is selected.

The ModWorXPro.ini will be located in "C:\LEFMLink2G Data\ModWorXPro\build files" directory. There are three lines in the ModWorXPro.ini file that select a different html file for either 200MU code, 639 code, or Gas Meter code:

The apostrophe at the beginning of the other two lines makes those two lines comments. Only one of these three lines should ever be uncommented at any time. To use for Gas, do as such:

```
'MainScreenHTML=LEFMLinkDeviceMainDisplay200MU.htm
```

```
'MainScreenHTML=LEFMLinkDeviceMainDisplay.htm
```

MainScreenHTML=LEFMLinkDeviceMainDisplayGas.htm

Function Discussion

The transmitter performs all control and timing for the generation and measurement of acoustic pulses. Acoustic processing is performed by specialized proprietary boards that are designed to achieve high sampling rates, provide stable ultrasonic signals, and eliminate zero drift. The circuit boards within the transmitter are programmed to perform the following functions:

- Step through the ultrasonic path cycles
- Provide gain control for each ultrasonic path
- Compute flow
- Generate pulse outputs and analog outputs

The following pages outline and describe how the LEFMLink 2G presents the data gathered and calculated by the transmitter to the user for trouble shooting and meter diagnostics.

Menu Items

The following screen capture depicts 380Ci gas tab.

Header

Firmware Version: 101A960 Rev 03.01.03 | Checksum: CBBE | Last Mod By: S | Updates: 1416
 Date: 9/9/2014 10:48:00 AM | Setup ID: 8 | Mods: 136 | Samples/Info: 48

Path Info

	Path 1	Path 2	Path 3	Path 4	Path 5	Path 6	Path 7	Path 8	
TUp	779239.0	779423.0	779472.0	779367.0	779225.0	779592.0	452623.0	779322.0	ns
TDown	779250.0	779427.0	779468.0	779441.0	779254.0	779597.0	454583.0	779335.0	ns
DeltaT	-9.2	-2.1	4.6	-73.3	-29.6	-6.3	2505.0	-12.9	ns
Std Dev	6.9	4.9	5.9	6.7	5.1	5.0	0.0	5.8	ns
SOS	350.7	350.7	350.9	350.9	350.9	350.8	0.0	350.8	m/s
Velocity	-0.0034	-0.0010	0.0021	-0.0290	-0.0104	-0.0028	0.0000	-0.0046	m/s
WNorm	0.9102	1.0343	1.0343	0.9102	0.9102	1.0343	1.0343	0.9102	
Status	0000.0000	0000.0000	0000.0000	0000.0000	0000.0000	0000.0000	0000.0000	0000.0000	
% Good	100.00	100.00	100.00	100.00	100.00	100.00	0.00	100.00	%
Gain Up/Dn	54.6 55.0	54.5 54.7	53.8 53.8	55.2 56.4	56.9 56.8	52.6 53.3	87.9 87.0	57.1 56.3	dB
SNR	40 76	142 60	100 120	67 133	62.0 165.0	137.0 85.0	0.0 0.0		
SigAmpThrUp	0.2942	0.2738	0.2739	0.2476	0.3074	0.2736	0.3112		
SigAmpThrDn	0.2998	0.2840	0.2720	0.2667	0.3092	0.2843	0.3019		
Turb %	-74.7774	-231.1418	127.7761	-9.0969	57.1008	-79.0027	0.0000	-44.5156	
Flatness Ratio	0.8800	Asymmetry Ratio	0.0000						
VSwrl	0.0000	Plane Balance Ratio	0.0000						
System Alarm	Fail	Inside Diameter	0.19411314 m						
Volume Rate	-0.5 m ³ /H	Period of Signal	5						
Meter Factor	1.00000	Alert Threshold	0.2						
Temperature	20.97013 °C	Fail Threshold	0.5						
Pressure	100.00000 kPa								
SOS	350.8 m/s	HF Modifier	0.99980						
Velocity	-0.0044 m/s	Profile Correction	0.00020						

Meter Setup Info (points to Turb % field)

VOS Cross Check

Short	Uone	U	U	U
1	-0.02	0.05	0.01	999999.00
2	-0.08	-0.01	-0.05	999999.00
3	-0.07	0.00	-0.04	999999.00
4	-0.05	0.02	-0.02	999999.00

Meter Info (points to Volume Rate, Temperature, Pressure, SOS, Velocity)

Logging Button (points to Data Logging button)

Figure 8-2 Gas Diagnostics tab navigated to from the front page



Figure 8-3 Gas Diagnostics Header

Header Info

- Updates – Total number of data requests made by LEFMLink 2G that have been acknowledged by the transmitter. This value typically increments by one (1) every five (5) seconds.
- Samples/Info – The number of acoustic measurement scans during the last update period.
- Setup ID – Configuration ID of the device
- Firmware Version –Firmware identification and revision level.
- Checksum of the transmitter’s configuration
- Time/Date of the transmitter’s real time clock
- Last Mod By – Index of the user (1 through 5 and 6 is the administrator)
- Mods – Number of revisions to the configuration (since software was installed)

	Path 1		Path 2		Path 3		Path 4		Path 5		Path 6		Path 7		Path 8		
TUp	779239.0		779423.0		779472.0		779367.0		779225.0		779592.0		452623.0		779322.0		ns
TDown	779250.0		779427.0		779468.0		779441.0		779254.0		779597.0		454583.0		779335.0		ns
DeltaT	-9.2		-2.1		4.6		-73.3		-29.6		-6.3		-2505.0		-12.9		ns
Std Dev	6.9		4.9		5.9		6.7		5.1		5.0		0.0		5.8		ns
SOS	350.7		350.7		350.9		350.9		350.9		350.8		0.0		350.8		m/s
Velocity	-0.0034		-0.0010		0.0021		-0.0290		-0.0104		-0.0028		0.0000		-0.0046		m/s
VNorm	0.9102		1.0343		1.0343		0.9102		0.9102		1.0343		1.0343		0.9102		
Status	0000.0000		0000.0000		0000.0000		0000.0000		0000.0000		0000.0000		0000.0000		0000.0000		
% Good	100.00		100.00		100.00		100.00		100.00		100.00		0.00		100.00		%
Gain Up/Dn	54.6	55.0	54.5	54.7	53.8	53.8	55.2	56.4	56.9	56.8	52.6	53.3	87.9	87.0	57.1	56.3	dB
SNR	40	76	142	60	100	120	67	133	62.0	165.0	137.0	85.0	0.0	0.0	55.0	59.0	
SigAmpThrUp	0.2342		0.2738		0.2739		0.2476		0.3074		0.2736		0.3112		0.3598		
SigAmpThrDn	0.2398		0.2840		0.2720		0.2667		0.3092		0.2843		0.3019		0.3113		
Turb %	-74.7774		-231.1418		127.7761		-9.0969		-17.1008		-79.0027		0.0000		-44.5156		

Figure 8-4 LEFMLink Gas Path information

Path Info

- TUp– Acoustic transit time (nanoseconds) for each path, ending at the upstream transducer.
- TDown – Acoustic transit time (nanoseconds) for each path, ending at the downstream transducer.
- DeltaT – Difference between upstream and downstream transit time (nanoseconds) for each path.

- Std Dev– Measure of signal stability; calculates the standard deviation of delta T (nanoseconds).
- SOS– Calculated speed of sound in the fluid.
- Velocity – Fluid velocity calculated by each path.
- VNorm – normalized velocity of each path to the meter average.
- Status – Path Status; Normal, Reject, VOS (Sound Velocity Error) for each path.
- % Good – Percent Data Accepted, normally greater than 95%.
- Gain Up & Dn – Pulse Catch Gain in dB, normally less than 70 dB.
- SNR – Signal to Noise Ratio; ratio of acoustic signal amplitude to baseline noise.
- SigAmpThrUp – Ratio of first positive signal peak to signal max in upstream direction.
- SigAmpThrDn – Ratio of first positive signal peak to signal max in downstream direction.
- Turb% – Calculates the standard deviation of delta t normalized to delta t and expressed as a percentage.

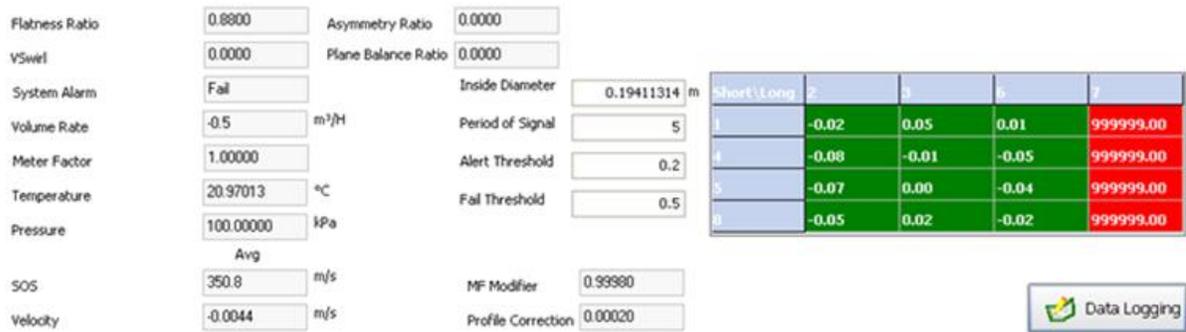


Figure 8-5 LEFMLink 2G Meter information

Meter Information

- Flatness Ratio – Ratio of outside path velocity to inside path velocity .
- Swirl – Swirl ratio normalized to axial velocity.
- System Alarm– Provides overall system status.
- Volume Rate– Current meter volumetric flow rate.
- Meter Factor – Calculated meter factor used to correct the flow measurement.
- Temperature– Current meter body temperature.
- Pressure– Current meter pressure. (If used)
- SOS– Meter average calculated speed of sound in the fluid.
- Velocity– Meter average calculated fluid velocity.

Inside Diameter	0.19411314 m	Short\Long	2	3	5	7
Period of Signal	5	1	-0.02	0.05	0.01	999999.00
Alert Threshold	0.2	4	-0.08	-0.01	-0.05	999999.00
Fail Threshold	0.5	5	-0.07	0.00	-0.04	999999.00
		8	-0.05	0.02	-0.02	999999.00

Figure 8-6 VOS Cross check and Meter Setup descriptions for LEFMLink 2G

VOS Cross Check

The VOS Cross Check is calculated using the following equation:

$$\text{VOS Cross Check} = \frac{\text{InsideDiameter} * (\text{VOS_long_path} - \text{VOS_short_path})}{(\text{PeriodOfSignal} * \text{VOS_long_path} * \text{VOS_short_path})}$$

The results of the VOS cross check are shown numerically in LEFMLink 2G, as well as color coded (green = pass, yellow = alert, and red = fail). Pass fail criteria are user defined within the LEFMLink 2G interface software.

Meter Setup Info

- Inside Diameter – The inside diameter of the meter.
- Period of Signal – The period of the signal, typically 5 μs for 200 kHz transducers.
- Alert Threshold– User defined VOS cross check value in terms of signal periods.
- Fail Threshold– User defined VOS cross check value in terms of signal periods.

Data Logging

The data logging function is available within the “Gas Tab”, and functions in the same manner as is described in section 6 of this manual. Please refer to section 6 for data logging instruction.

Section 9

Tools

Each of the tools launches a screen described in the following sections. These tools include:

- Viewing Modbus Registers (tool to see and write to any Modbus register)
- Output forcing – Force values to analog and frequency output for loop calibration purposes.
- Zeroing Meter (Special site procedures required)

Viewing Modbus Registers

Occasionally, test values may be entered into the device (Holding registers) and specific values may be read from the device. LEFMLink 2G has a tool for that task. The tool is shown below.

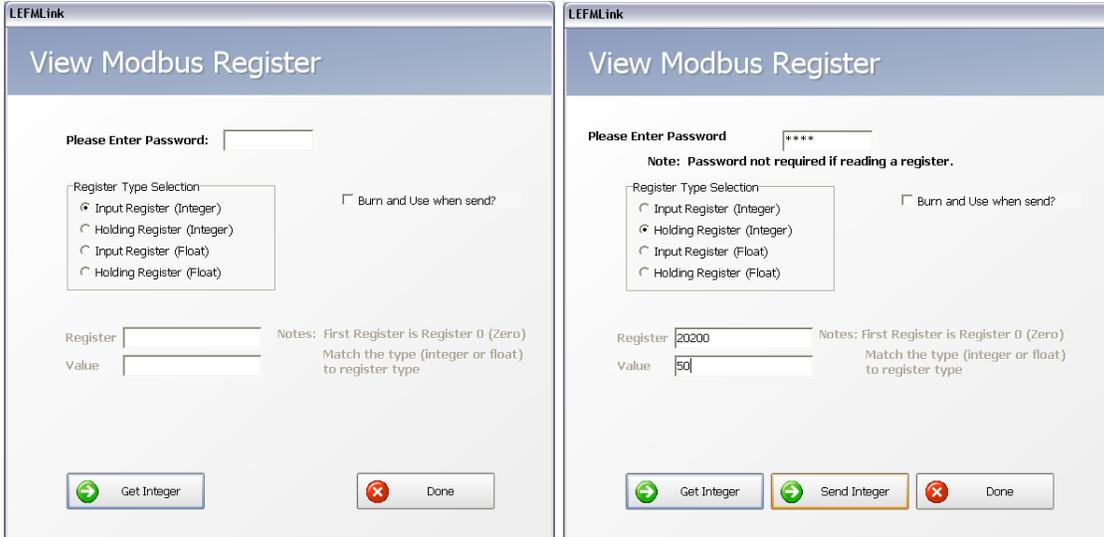


Figure 9-1: Modbus Register Viewing Changing
(Input Registers on Left and Holding Registers on Right)

Note: Holding registers are password protected as discussed in Section 3.

Output Forcing



Scaling the analog outputs will change the flow measurement observed by the site. Contact appropriate site personnel prior to any analog output forcing tests. While the transmitter will show the outputs forced on the display, coordination with the site is crucial.

During installation, device scaling and troubleshooting, the ability to set the analog outputs (current or pulse) to an arbitrary value – irrespective of the true indication can be a useful tool. This tool launches the following screen.

Output Forcing

Please Enter Password: *

Pulse Output Frequency 1000 Hz

Analog Output 1 50 %FS

Analog Output 2 50 %FS

Analog Output 3 50 %FS

Analog Output 4 50 %FS

Use the Calibrate button to transfer the contents of the fields to the target unit.

Calibrate Completed

Figure 9-2: Output Forcing

Zeroing Meter



Zeroing the meter will change the flow measurement observed by the site. Contact appropriate site personnel prior to any zeroing steps are performed.

During installation, periodic calibration and troubleshooting, the meter may be zeroed. This step requires exceptional diligence. If the flow through the meter is not truly zero – then an offset can be embedded into the device.

Proper site procedures are required to isolate flow through the meter and verify flow is zero and that the meter operations are acceptable.



Figure 9-3: Zeroing Meter

Communications

The user has the ability to explicitly change just the slave address and the baud rate on the device.



Figure 9-4: Set Device Comms

After changing the communications parameters on the device, the user can then change LEFMLink's communications parameters to match.

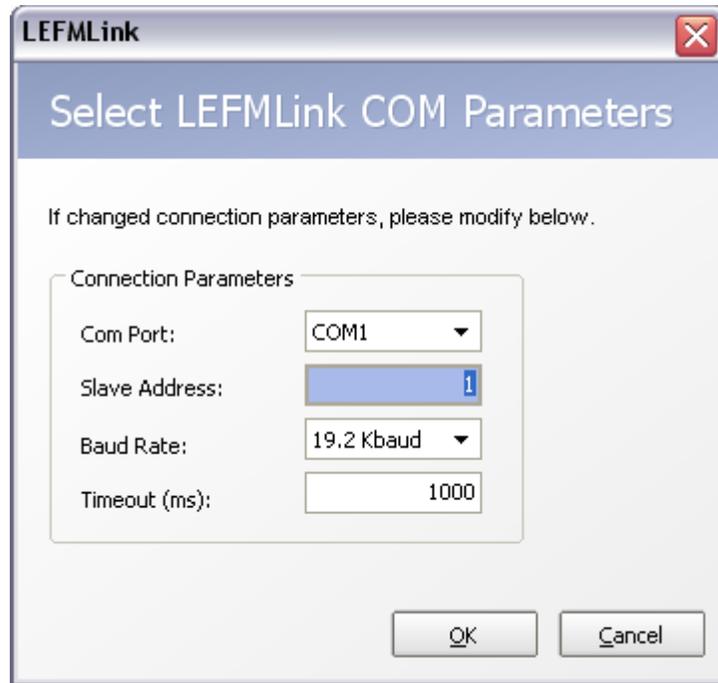


Figure 9-5: Select LEFMLink COM Parameters

WARRANTY - LIMITATION OF LIABILITY: Seller warrants only title to the products, software, supplies and materials and that, except as to software, the same are free from defects in workmanship and materials for a period of one (1) year from the date of delivery. Seller does not warranty that software is free from error or that software will run in an uninterrupted fashion. Seller provides all software "as is". **THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, OF MERCHANTABILITY, FITNESS OR OTHERWISE WHICH EXTEND BEYOND THOSE STATED IN THE IMMEDIATELY PRECEDING SENTENCE.** Seller's liability and Buyer's exclusive remedy in any case of action (whether in contract, tort, breach of warranty or otherwise) arising out of the sale or use of any products, software, supplies, or materials is expressly limited to the replacement of such products, software, supplies, or materials on their return to Seller or, at Seller's option, to the allowance to the customer of credit for the cost of such items. In no event shall Seller be liable for special, incidental, indirect, punitive or consequential damages. Seller does not warrant in any way products, software, supplies and materials not manufactured by Seller, and such will be sold only with the warranties that are given by the manufacturer thereof. Seller will pass only through to its purchaser of such items the warranty granted to it by the manufacturer.

Caldon[®] Ultrasonics

Customer Service & Technical Support

1000 McClaren Woods Drive
Coraopolis, PA 15108 USA
Tel 724-273-9300



www.caldon.net

MEASUREMENT SYSTEMS

Formerly: NuFlo Measurement Systems • Barton Instrument Systems • Caldor, Inc.

NORTH
AMERICA

1.800.654.3760

ms-us@c-a-m.com

ASIA
PACIFIC

603.2287.1039

ms-asiapacific@c-a-m.com

EUROPE, MIDDLE EAST
& AFRICA

44.1243.826741

ms-uk@c-a-m.com

USA: Houston, TX • Corpus Christi, TX • Kilgore, TX • Odessa, TX • Dallas, TX • Tulsa, OK
Duncan, OK • Denver, CO • Bakersfield, CA • Shreveport, LA • Lafayette, LA
Houma, LA • Pittsburgh, PA • Laurel, MS • Dunbar, WV • Casper, WY • Charleston, WV

CANADA: Calgary, AB • Edmonton, AB

INTERNATIONAL: Aberdeen, Scotland • Beijing, China • Bognor Regis, UK
Dubai, UAE • Hassi Messaoud, Algeria • Kuala Lumpur, Malaysia • Singapore

HOUSTON HEAD OFFICE: 281.582.9500 • www.c-a-m.com/flo